crosswater

SE114DNC - Mini basin mixer

Note:

For each part of the accessary, the dimension tolerance should be followed the list below.

0 ~ 100	101 ~ 200	201 ~ 400	⩾ 401
±1	±2	±3	±5

For the finished assembly, the dimension tolerance should be followed the list below.
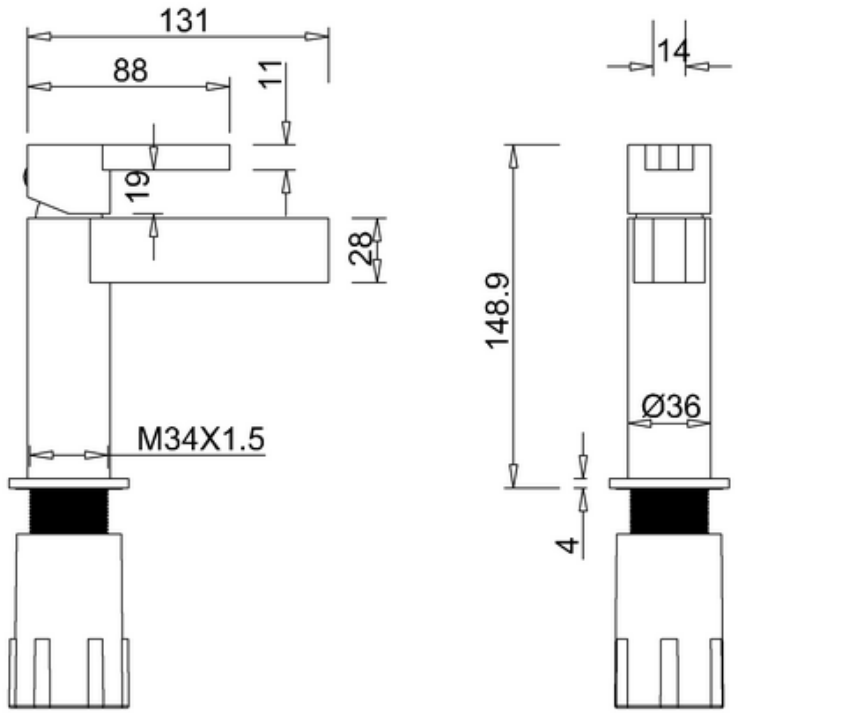
0 ~ 300	⩾ 301
±2	±5