


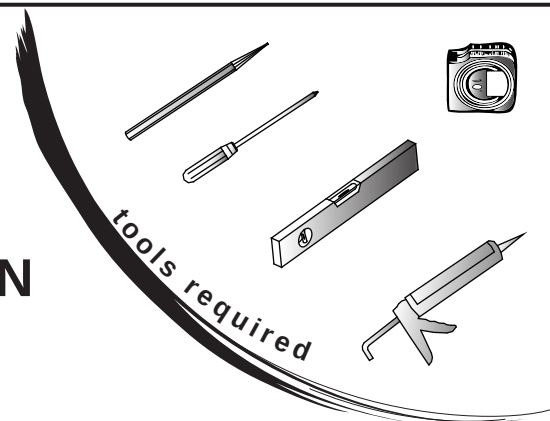


SHOWER TRAY INSTRUCTION

For any further information please contact
Simpsons on: **0845 873 8840**


Failure to follow instructions correctly may lead to the acrylic cap separating from the body of the tray.

①

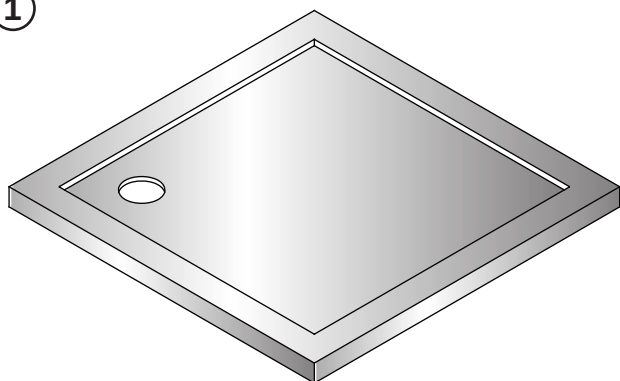


Remove protective plastic film from the areas near the waste and those sides of the tray which will be against a wall.

②

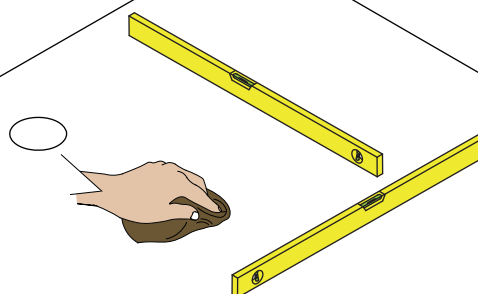


Ensure that the location of the shower tray is firm, level, and clean.

③

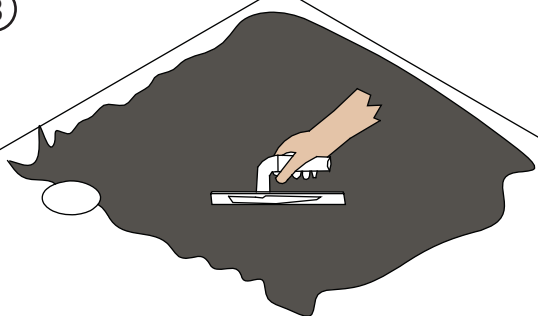


Install the shower tray on a bed of weak cement mix (sand/cement ratio 5:1). Tile adhesive can be used as an alternate to sand or cement. Please note if using water based adhesives, to enhance the bonding it is suggested that a suitable primer is applied to the base of the shower tray before installation.

④

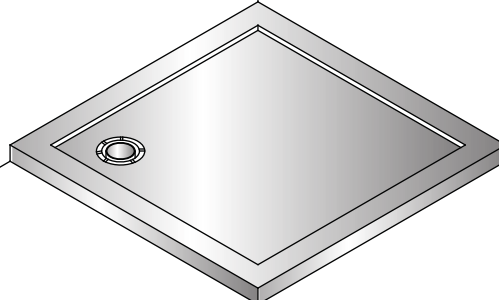


Fit the shower tray waste. Ensure the two side edges are flat to the wall. Place the shower tray onto the cement bed and apply gentle pressure with the palm of the hand to bed the tray into position.

⑤

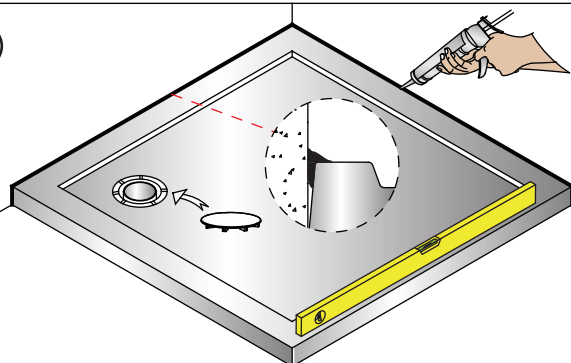

Level the tray and allow to set. When shower tray is set remove the remainder of the protective plastic film and connect the waste pipe and check for leakage. Please seal joints between tray and wall with an anti fungal silicone sealant and allow to set.

⑥

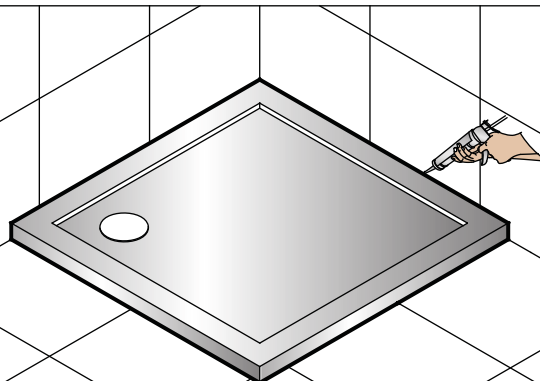

Tile and seal joints with an anti fungal silicone sealant and allow to set.