


ASURA

HINGED BATH SCREEN WITH HINGED PANEL AND ACCESS DOOR

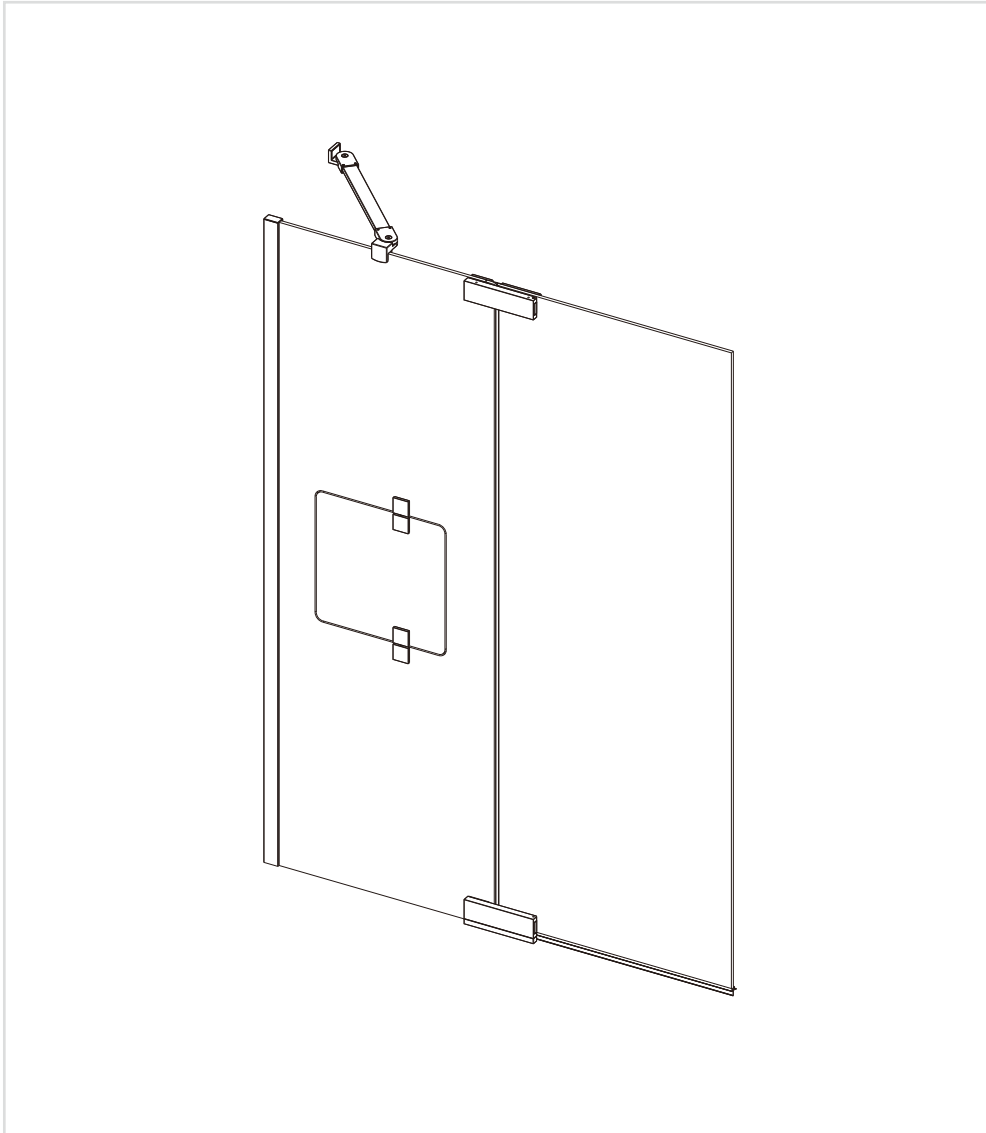

PRODUCT CODES:

AUUGP_A
AUBSHPAxx1200_B

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- The product should only be installed by a suitably qualified plumber/installer.
- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Crosswater immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×3 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.


Ensure seals are flush to prevent leaks.

ORIENTATION

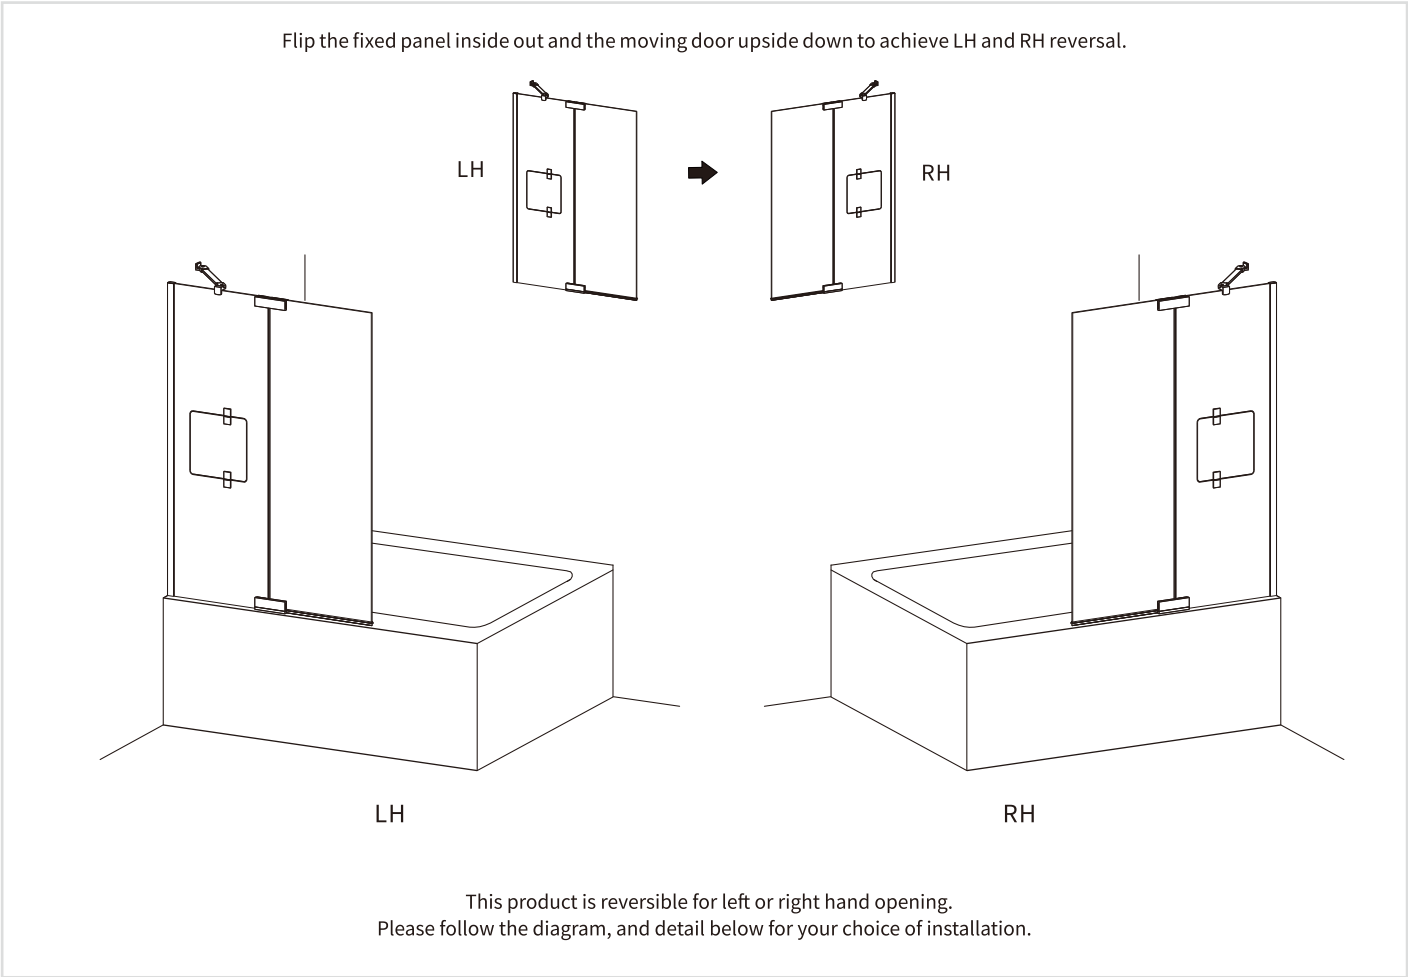

Tools Required (not supplied):

Spirit Level

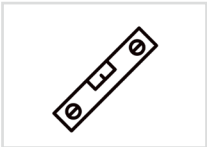

Pencil



Drill



Silicone



Knife



Torque Screw Driver



Snips







6mm Drill Bit





Measuring Tape




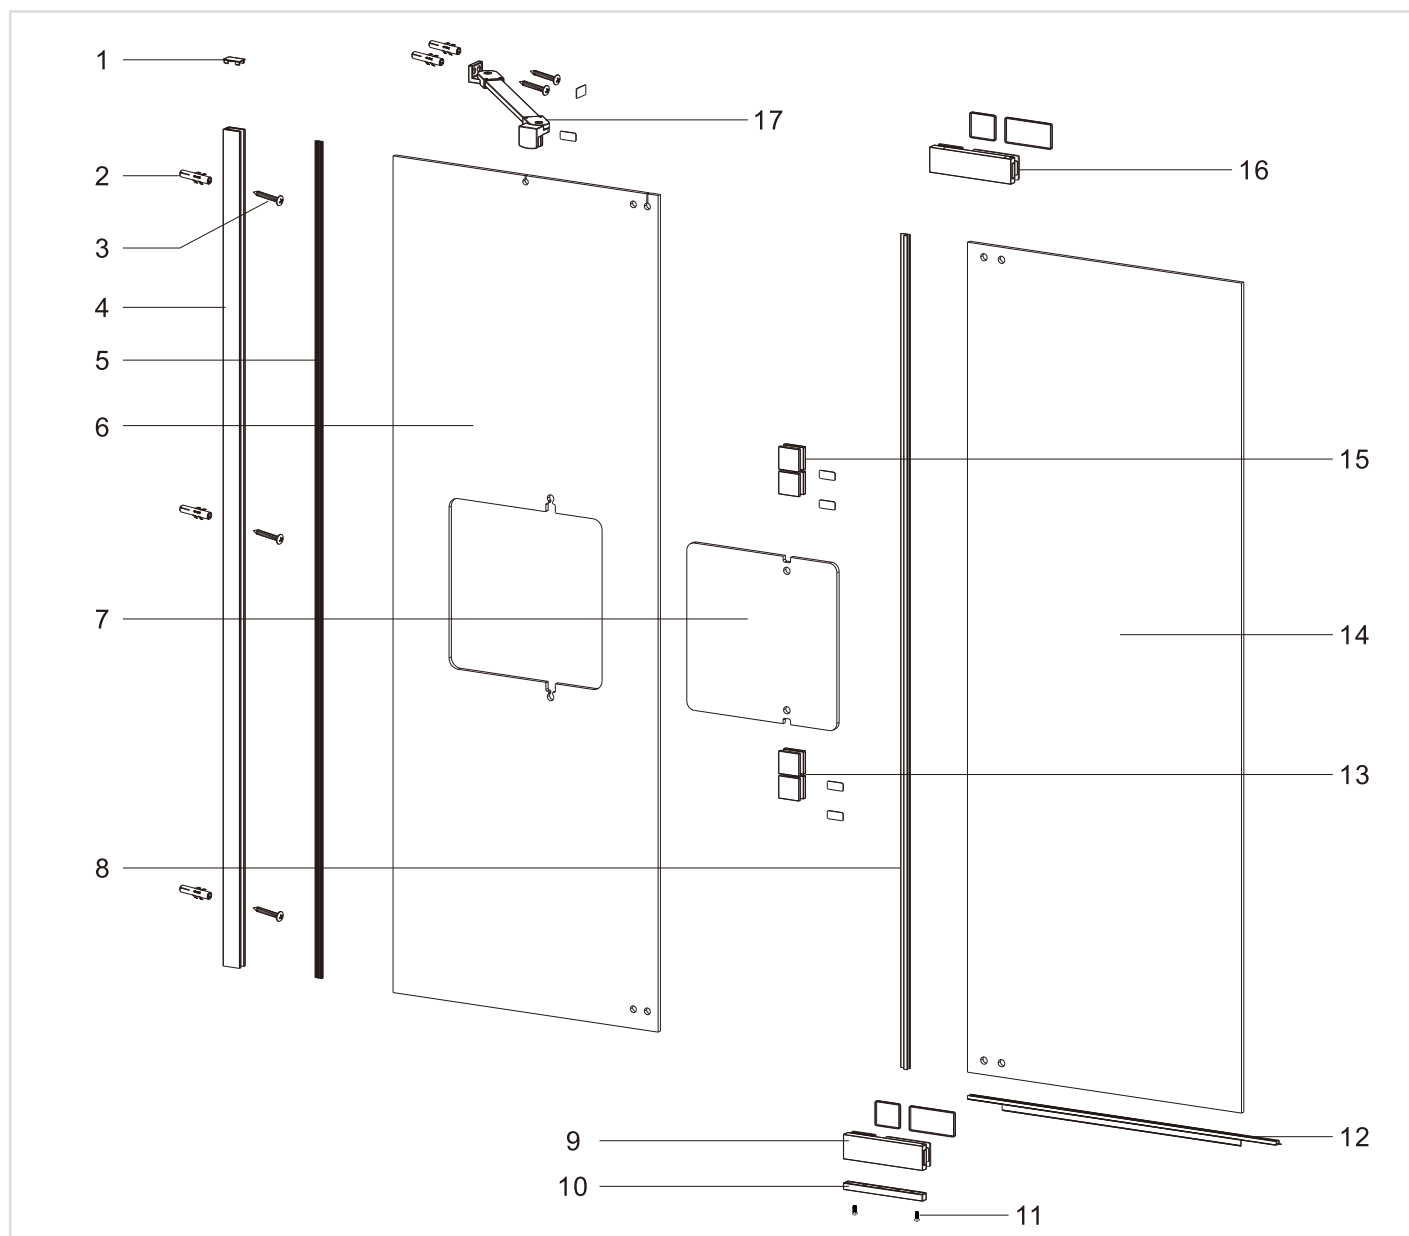


1	Wall Profile Cap		x1
2	Wall Plug		x3
3	Screw ST4X50		x3
4	Wall Profile		x1
5	Wedge Seal		x1
6	Fixed Panel		x1
7	Access Door		x1
8	Vertical Door Seal		x1
9	Hinge B		x1
10	Hinge Seat		x1
11	Screw M4X12		x2
12	Bottom Seal		x1
13	Pivot A		x1
14	Moving Door		x1
15	Pivot B		x1
16	Hinge A		x1
17	Bracing Bar		x1
18	Wedge Gasket Tool		x1
19	Tool		x2
20	Allen Key		2.5mm 3mm 4mm

INSTALLATION




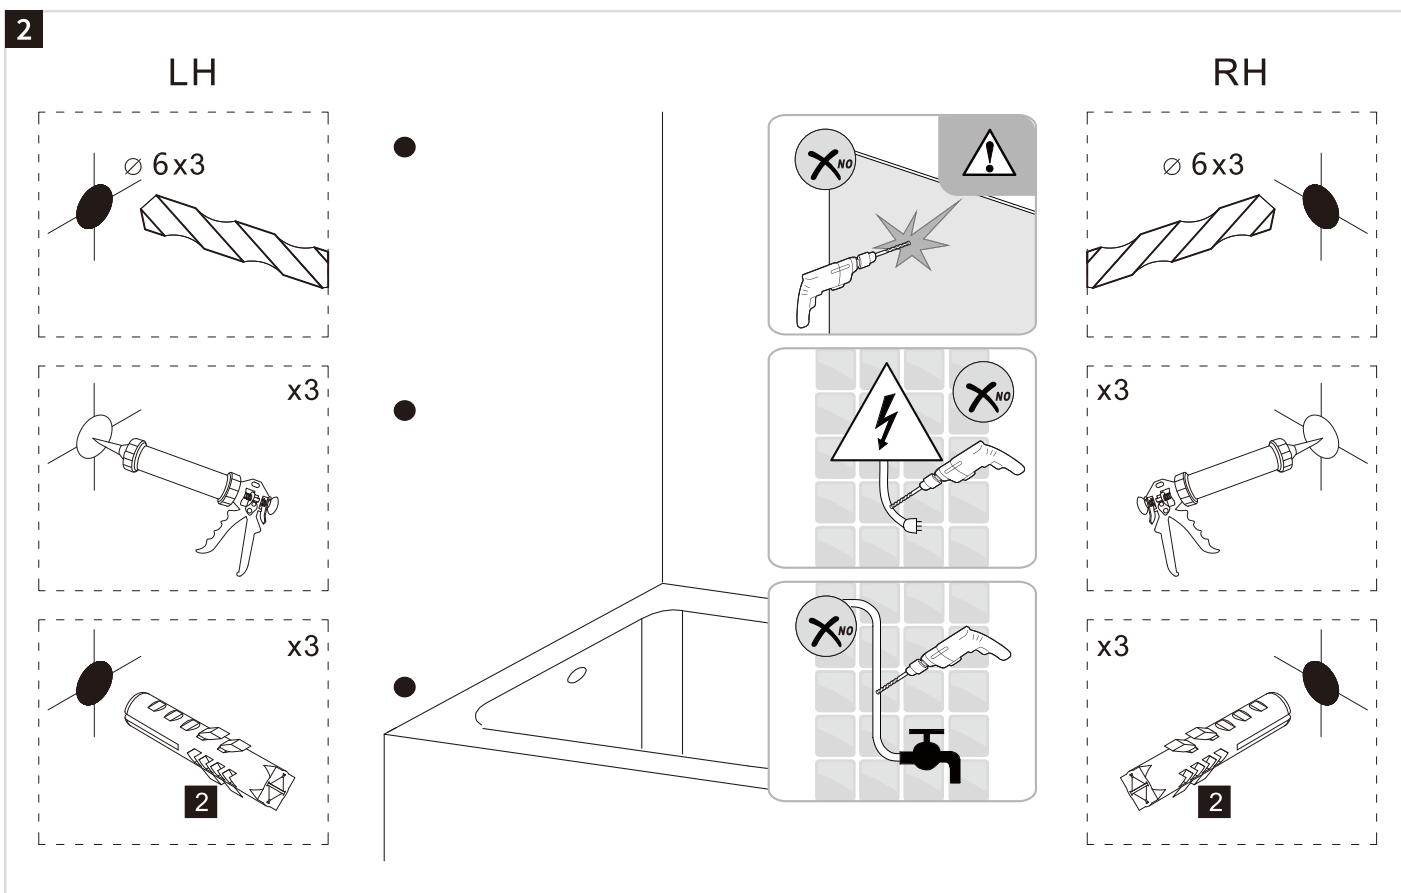
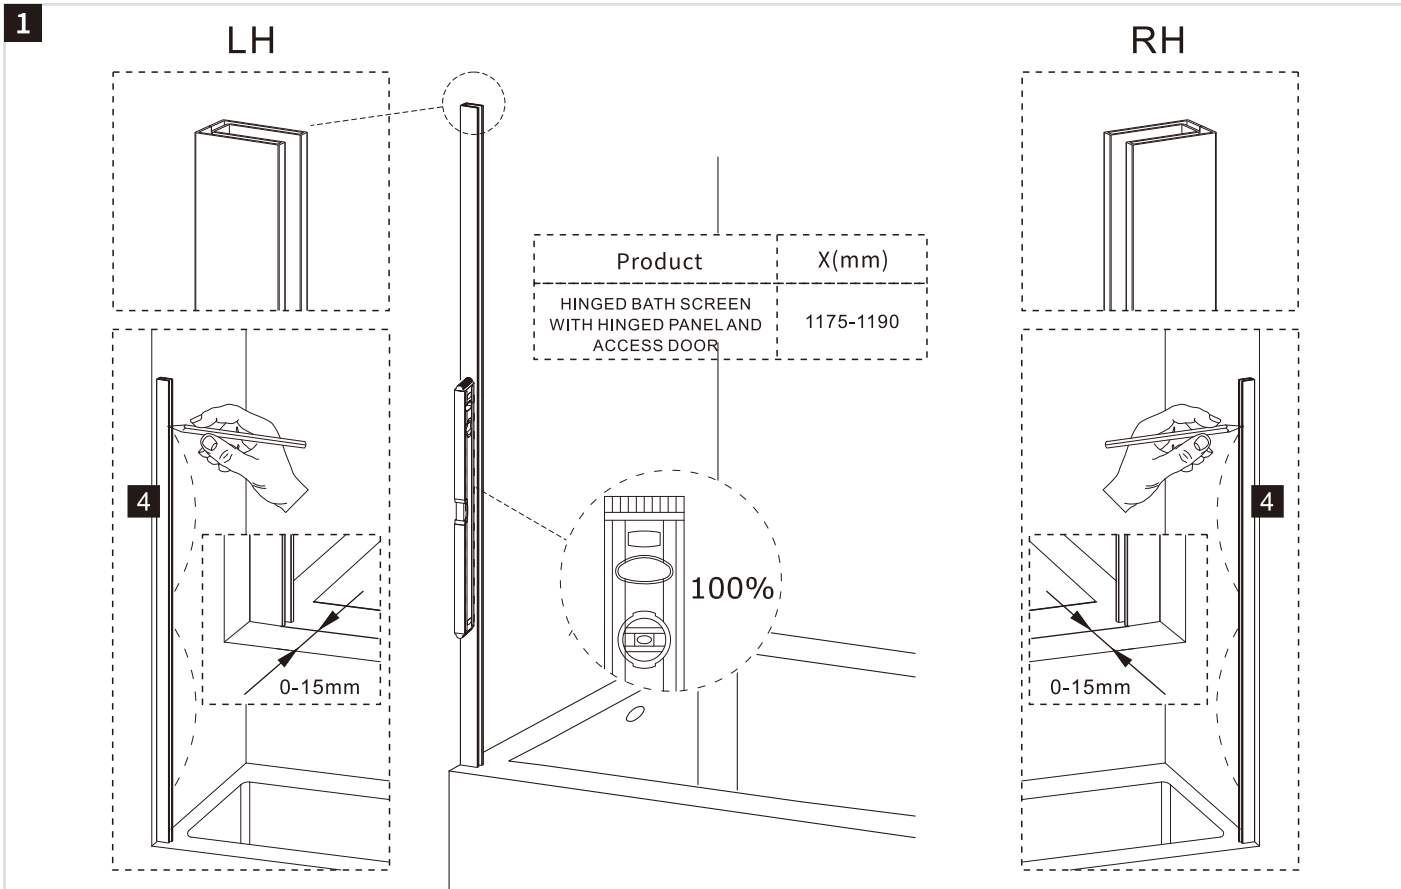


INSTALLATION

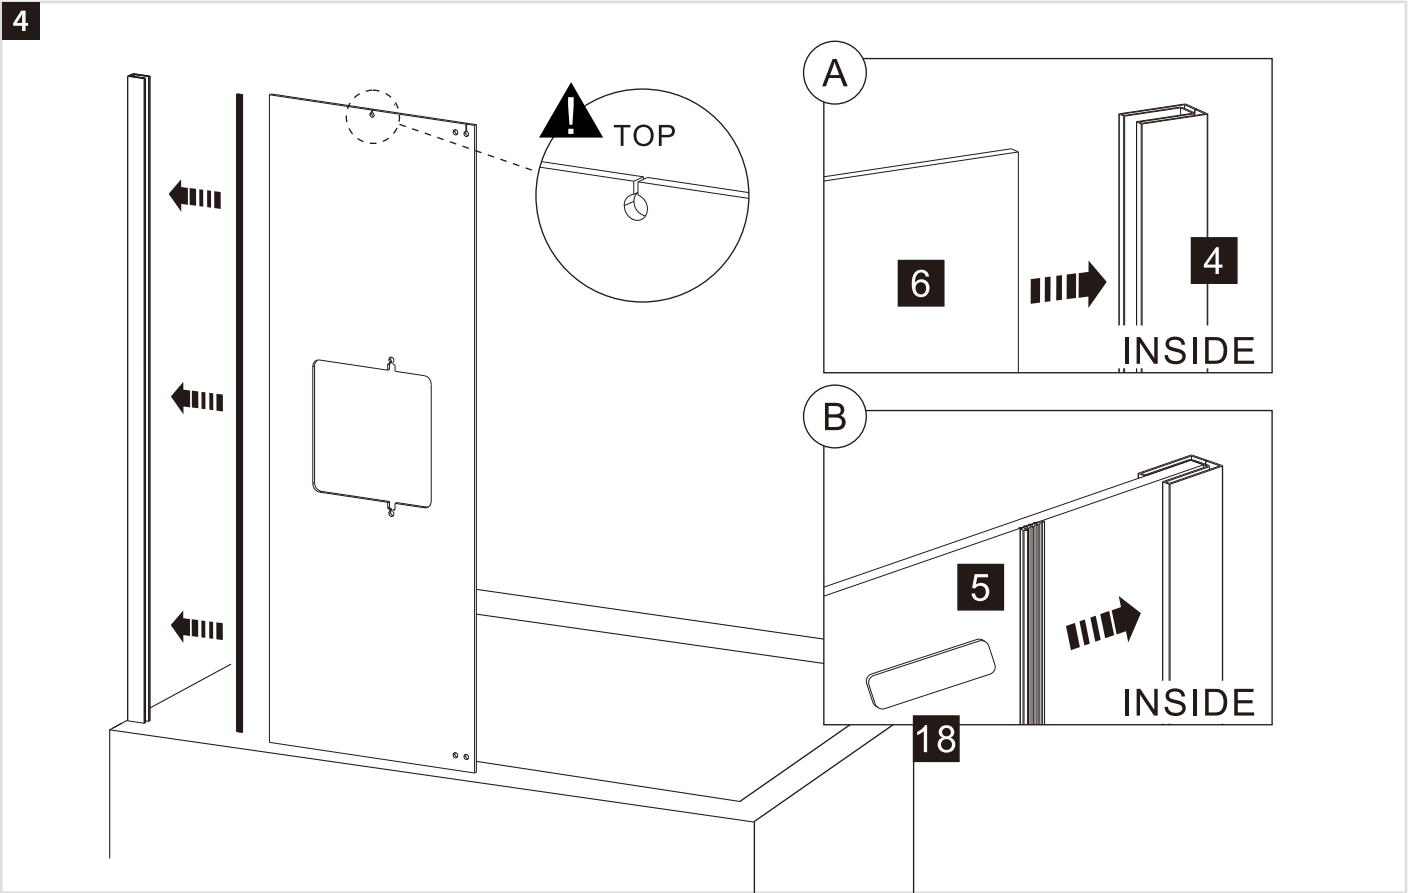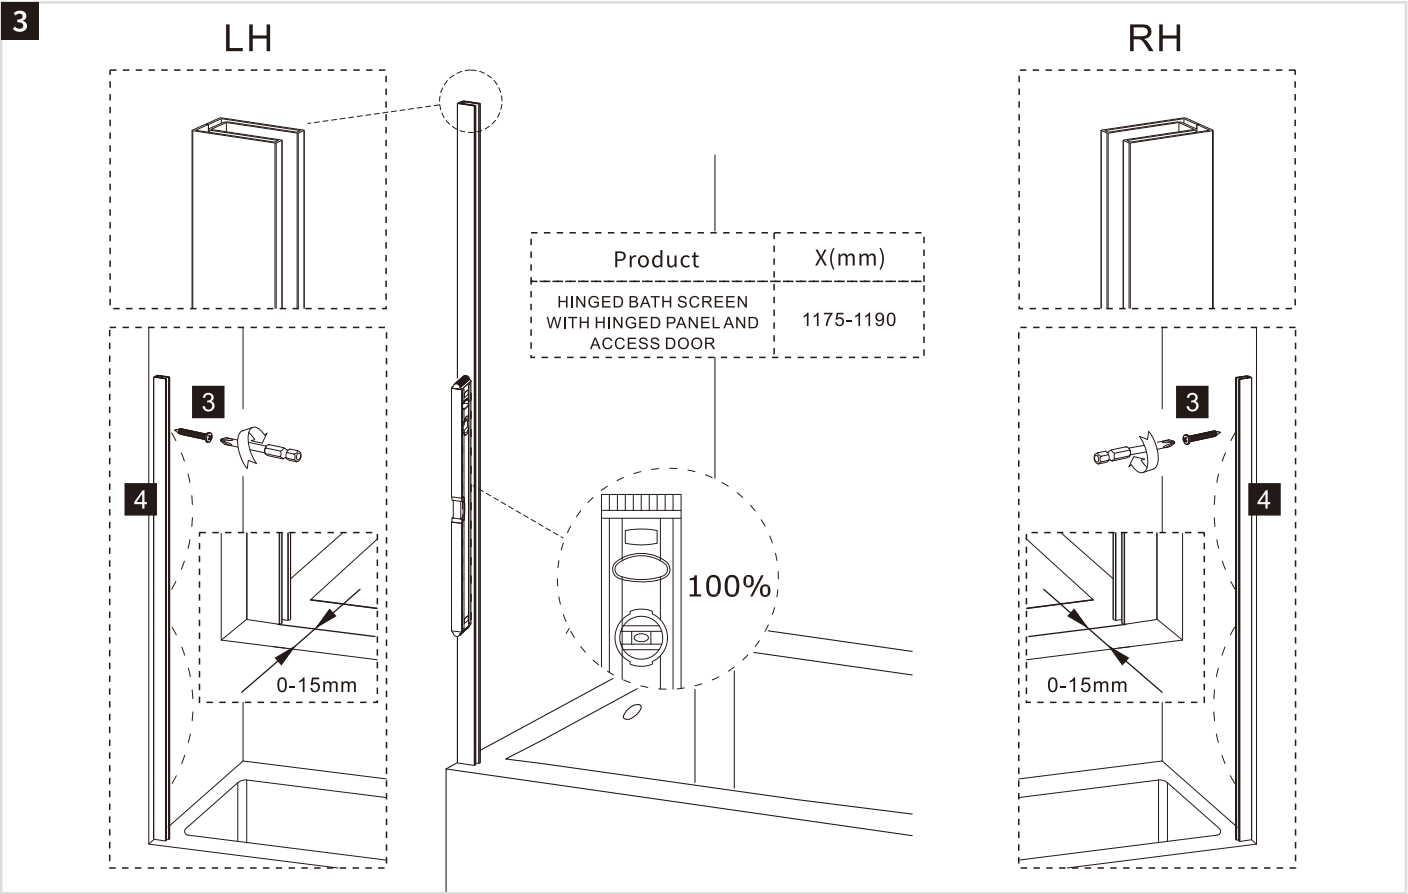












INSTALLATION

5

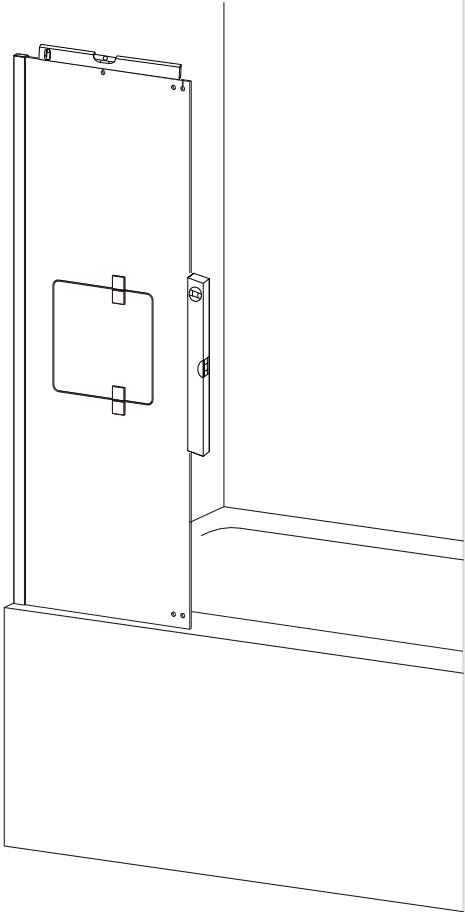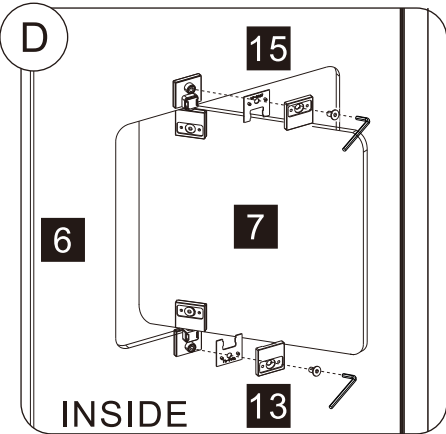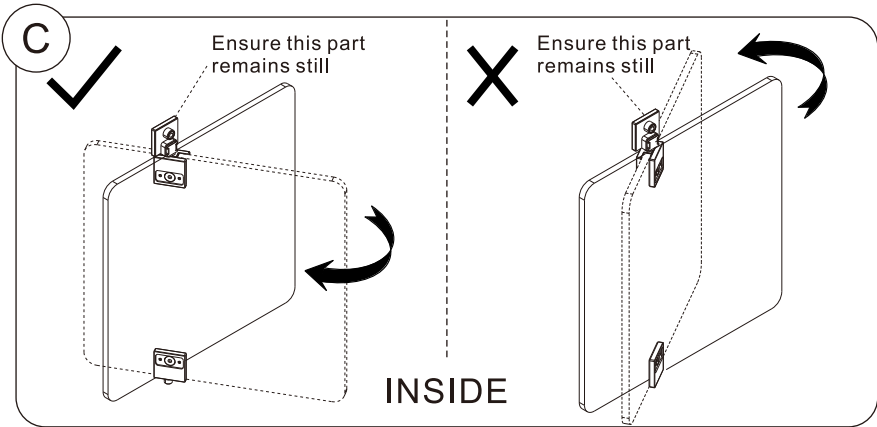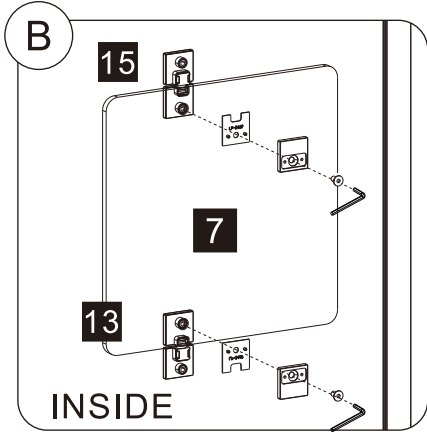
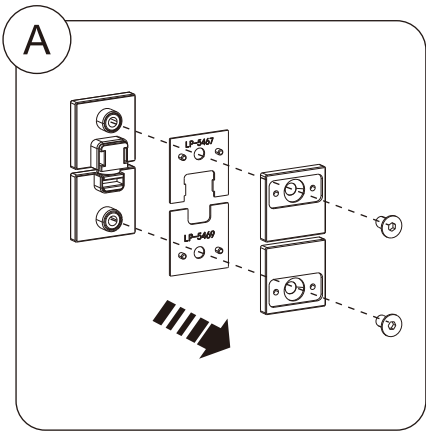


INSTALLATION

6

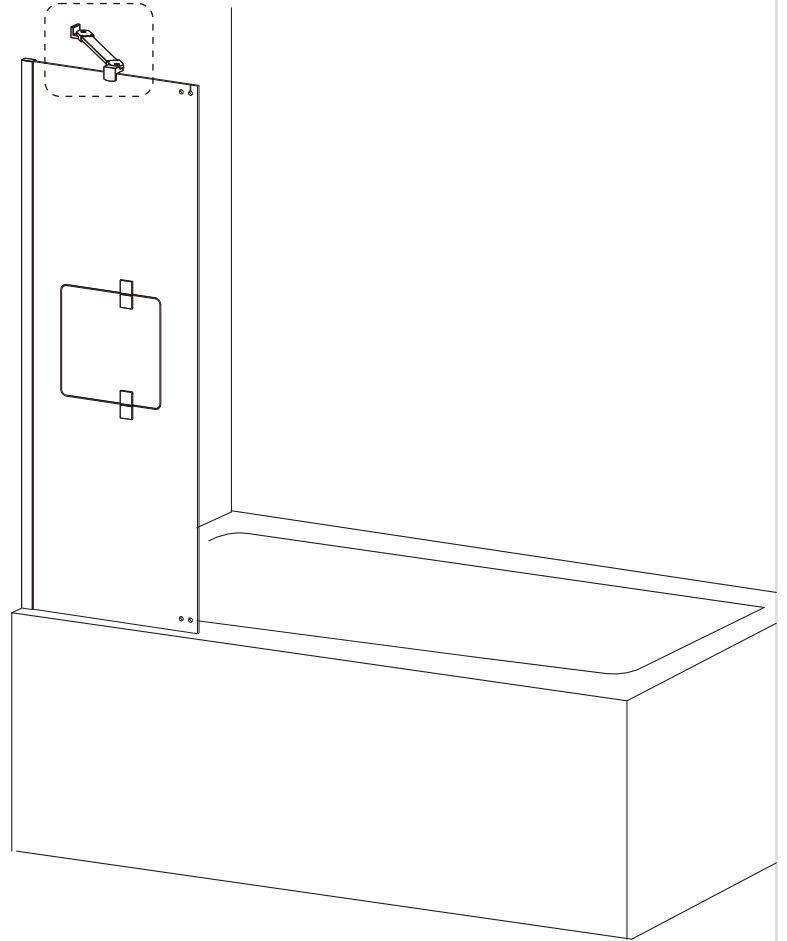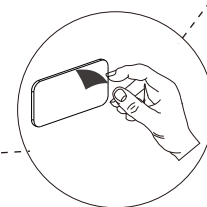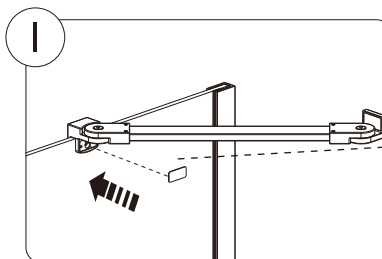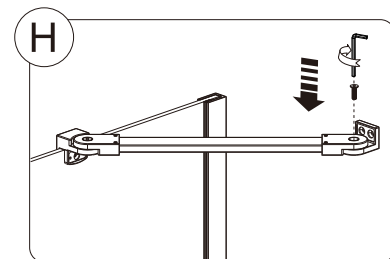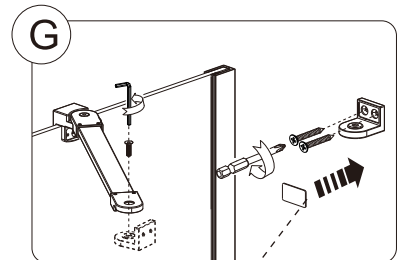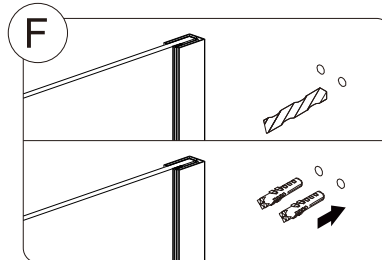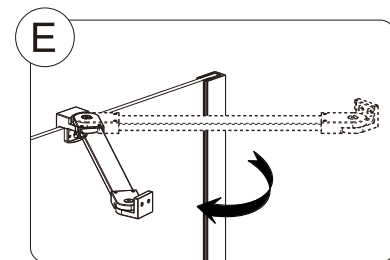
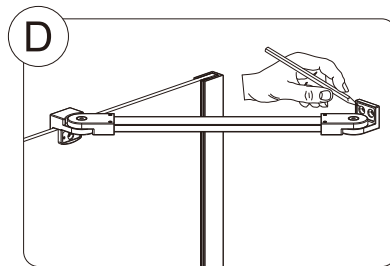
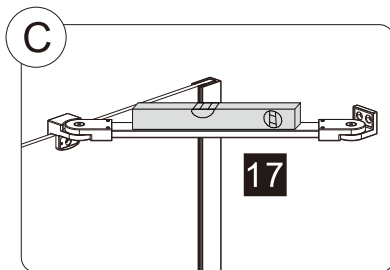
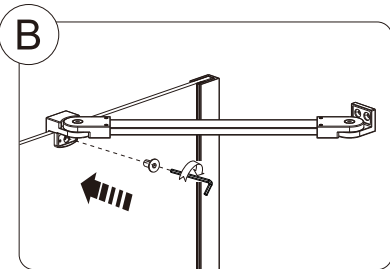
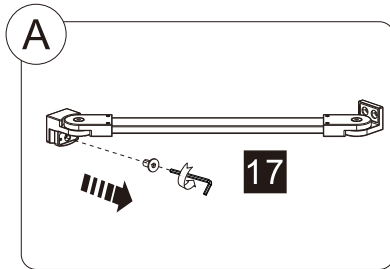


INSTALLATION

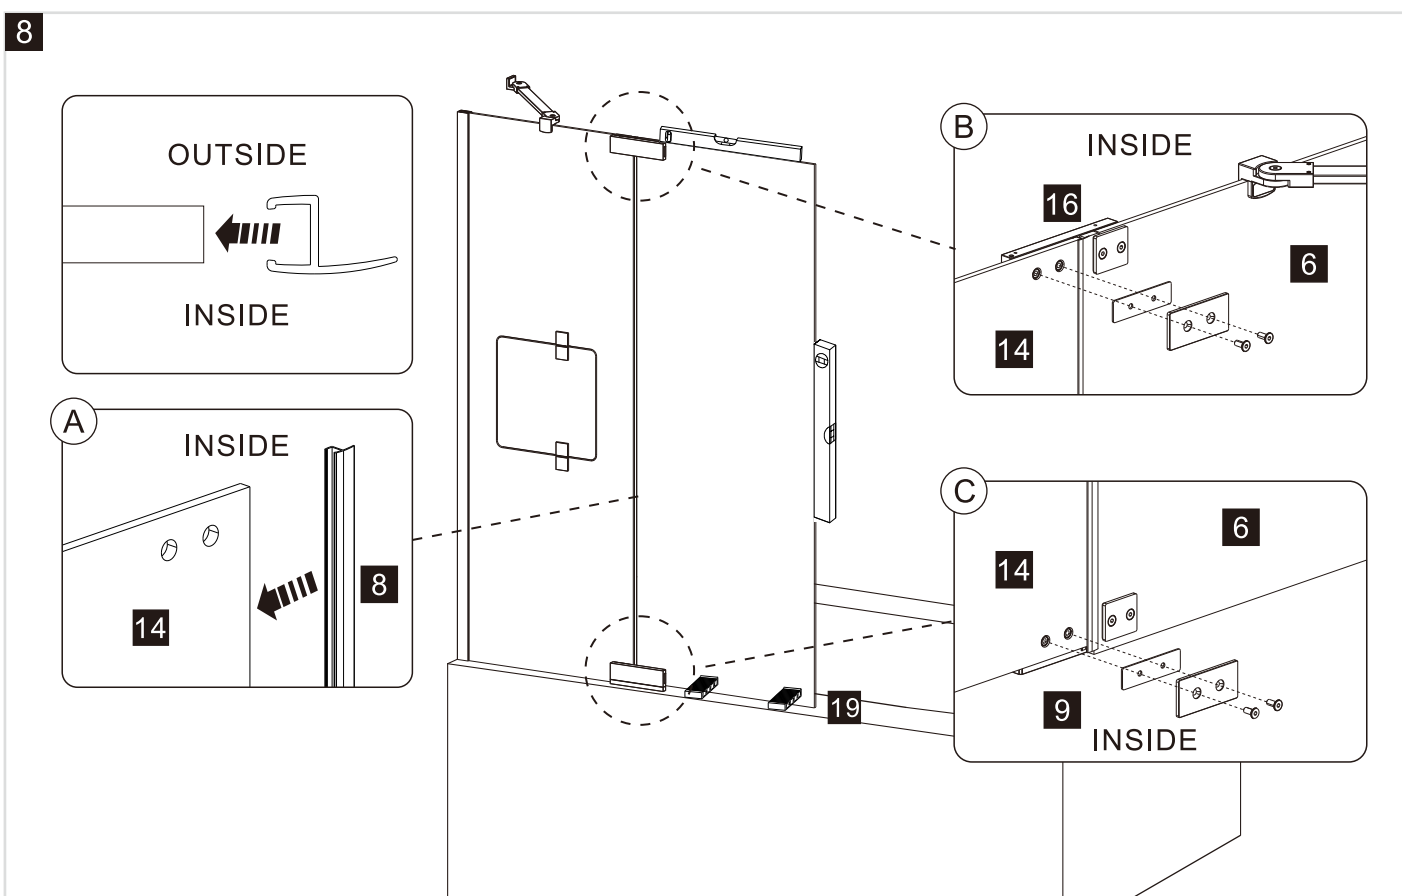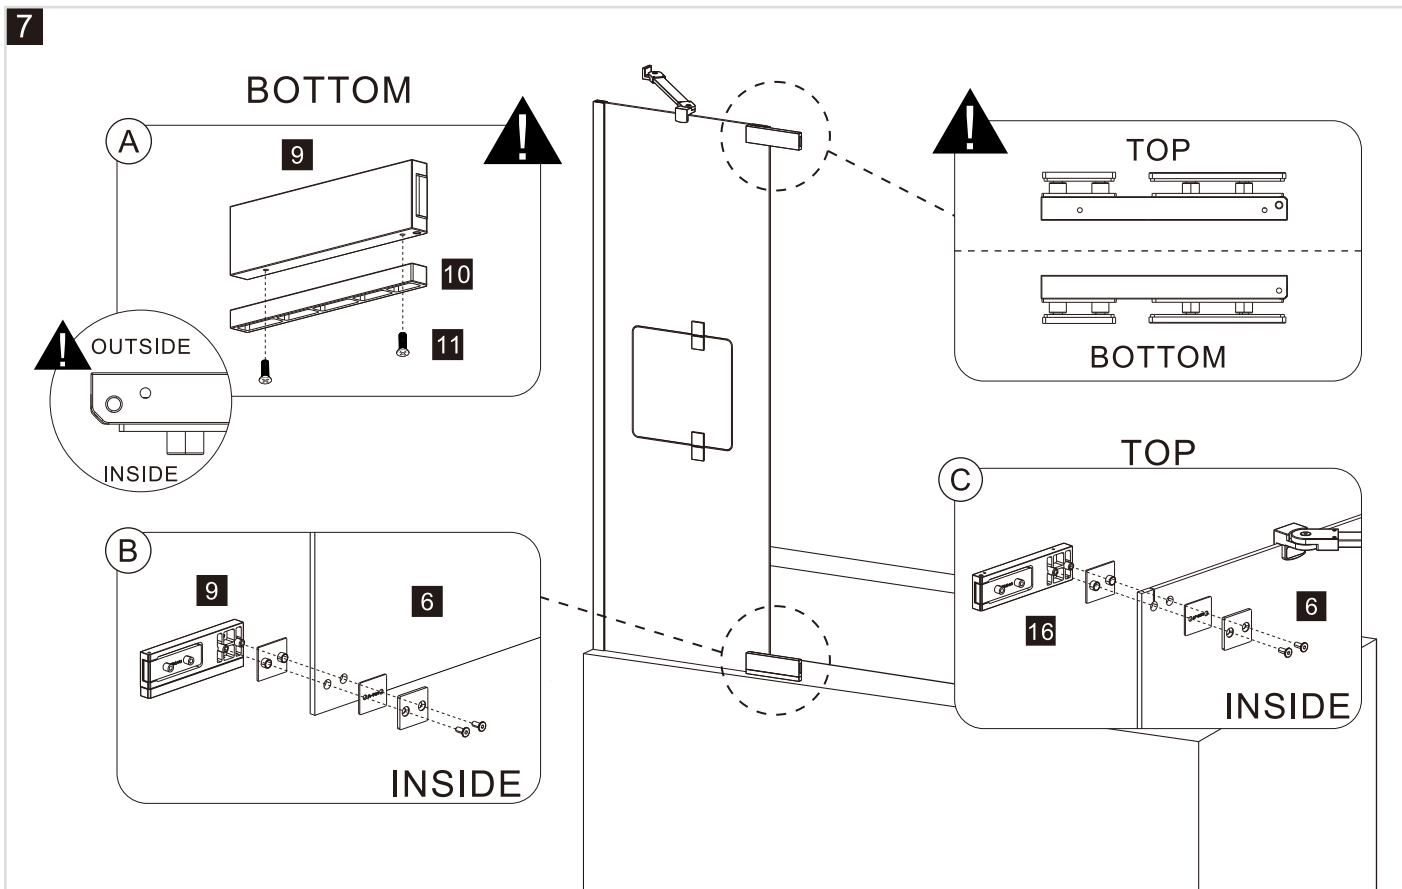


INSTALLATION

9

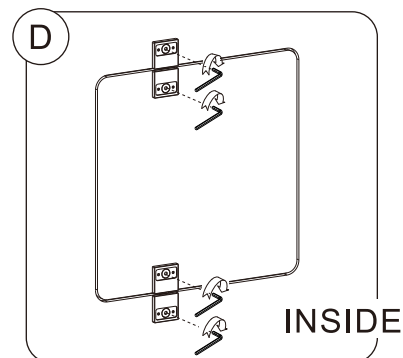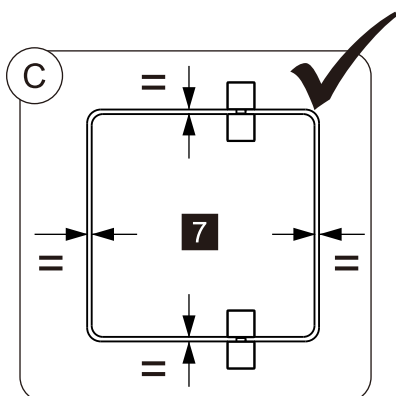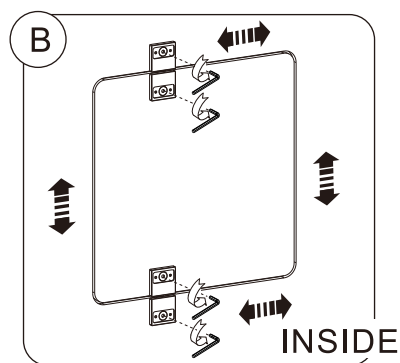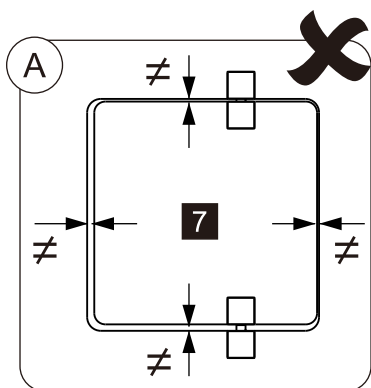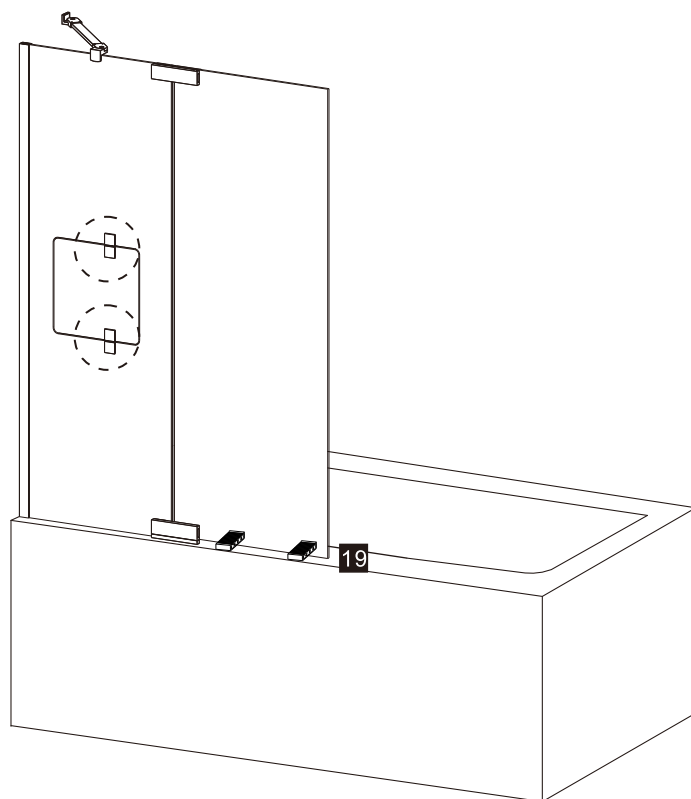


INSTALLATION

10

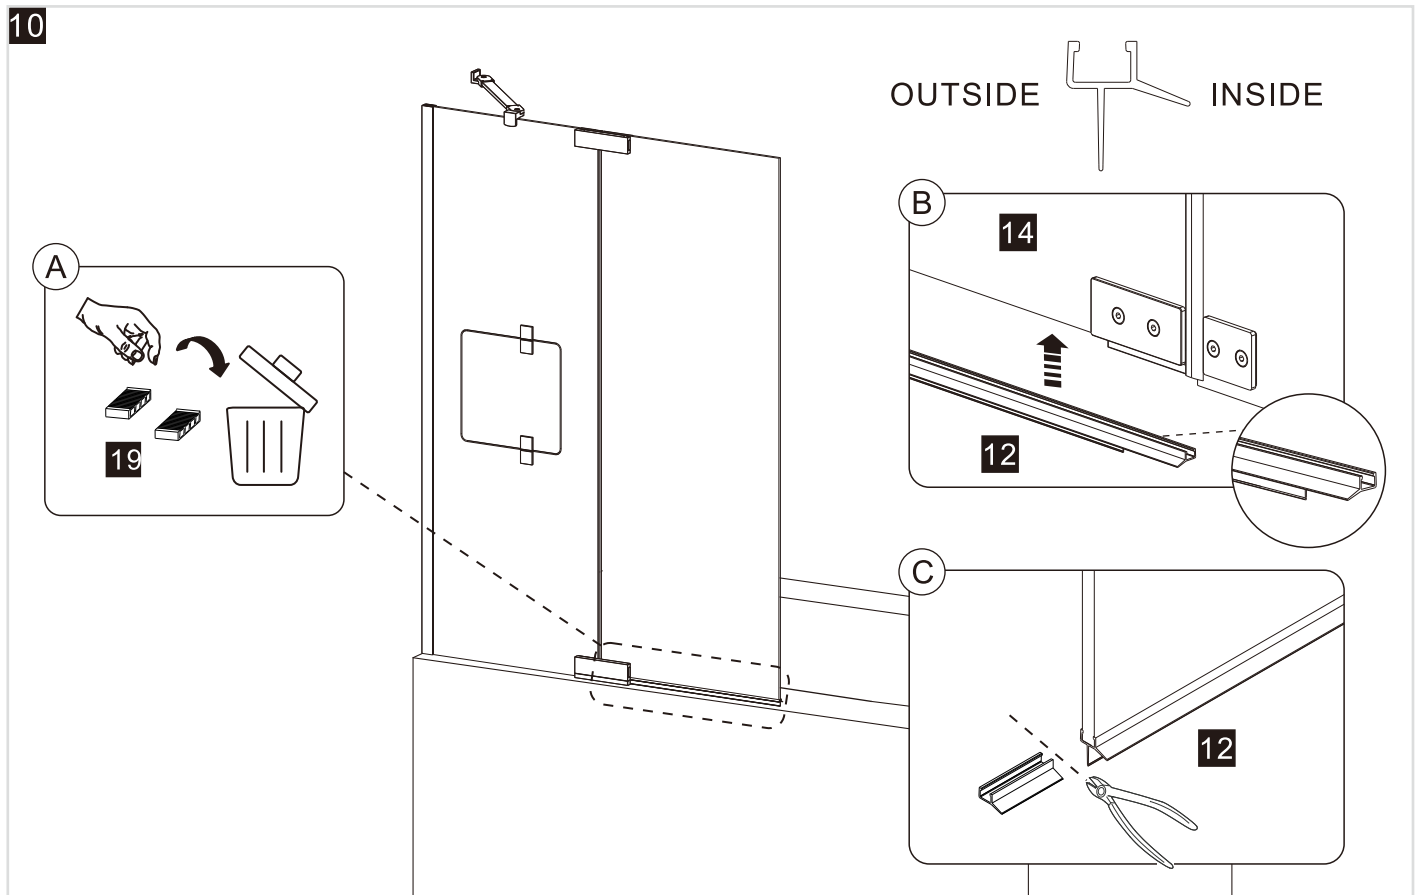


11

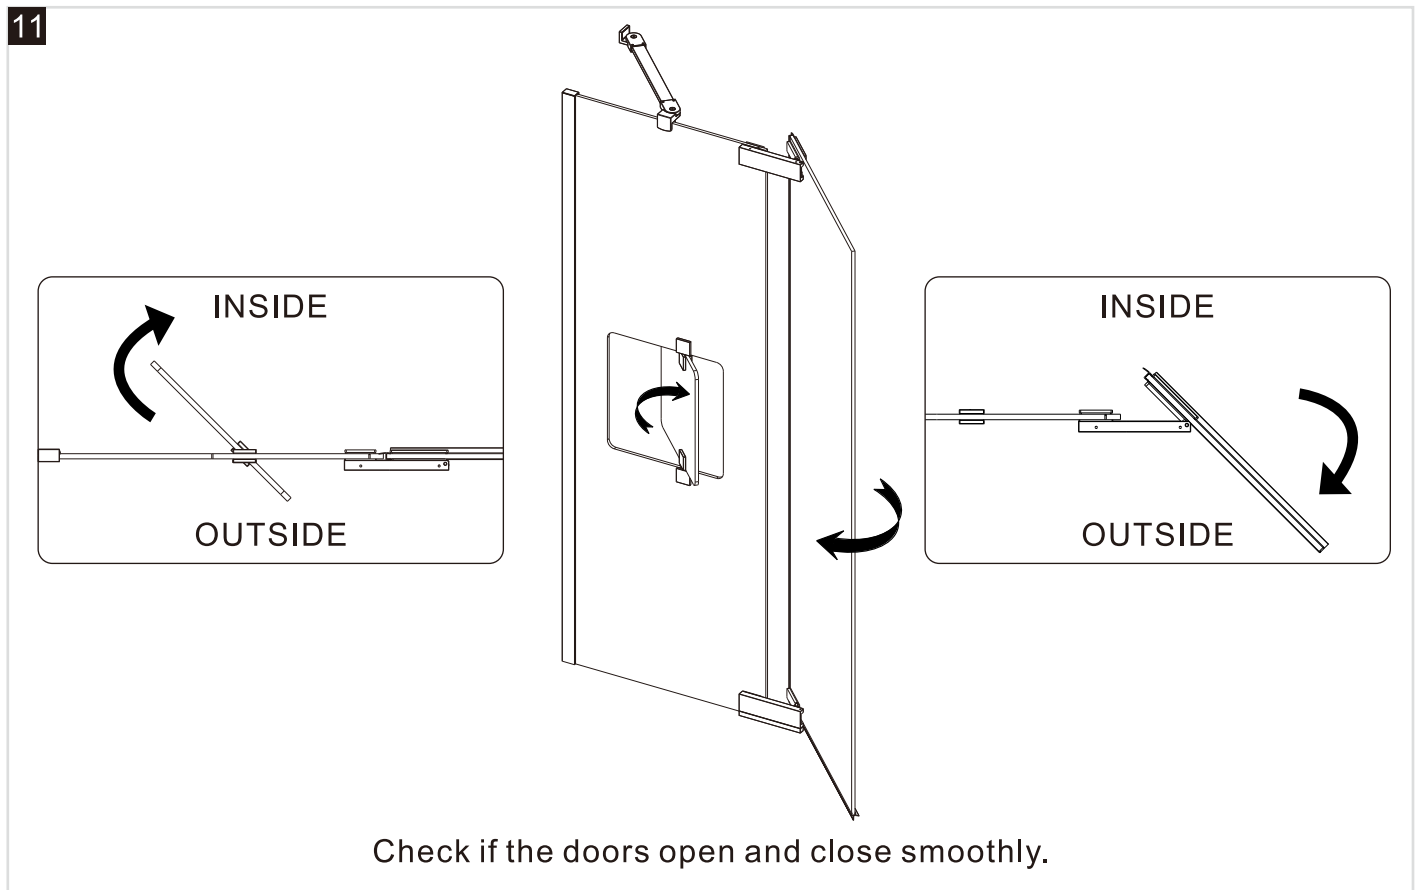

INSTALLATION

12

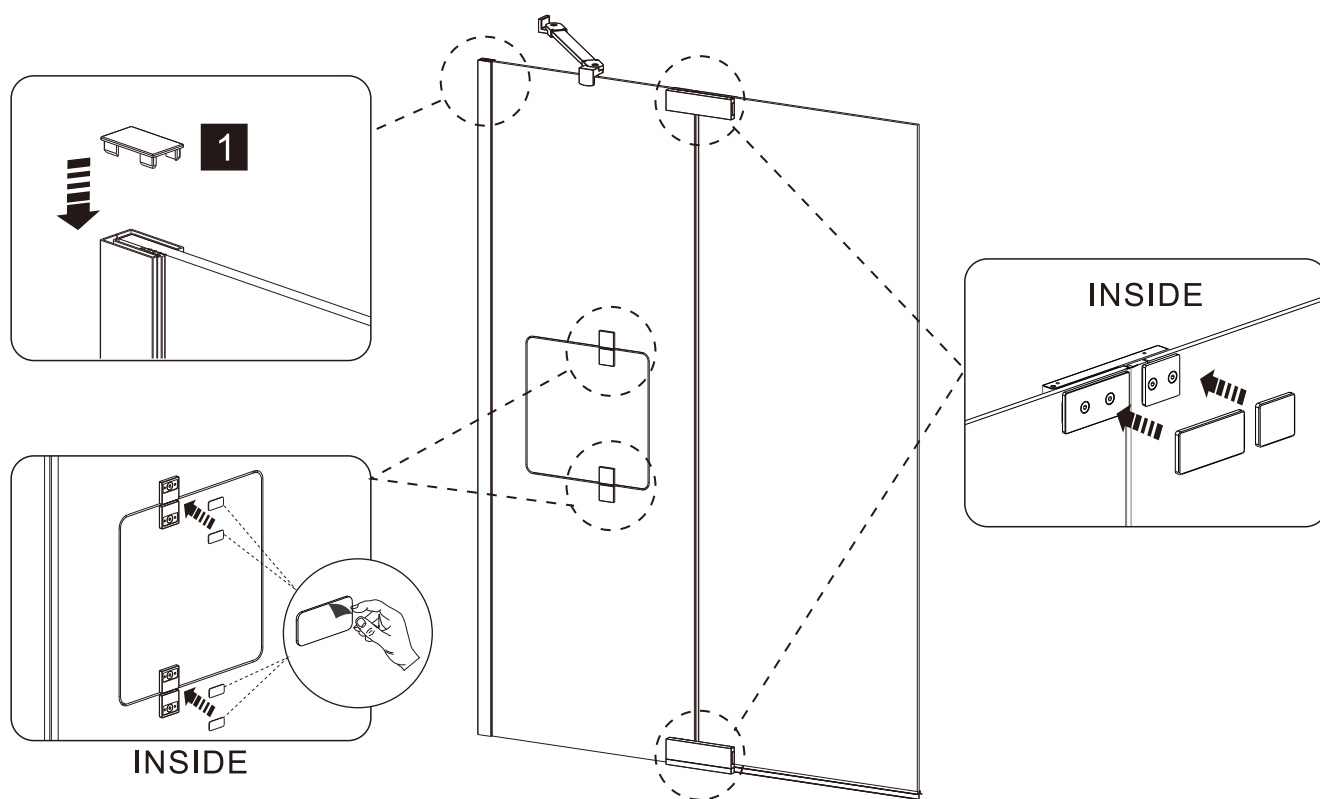

13

