


Double Bath Screen

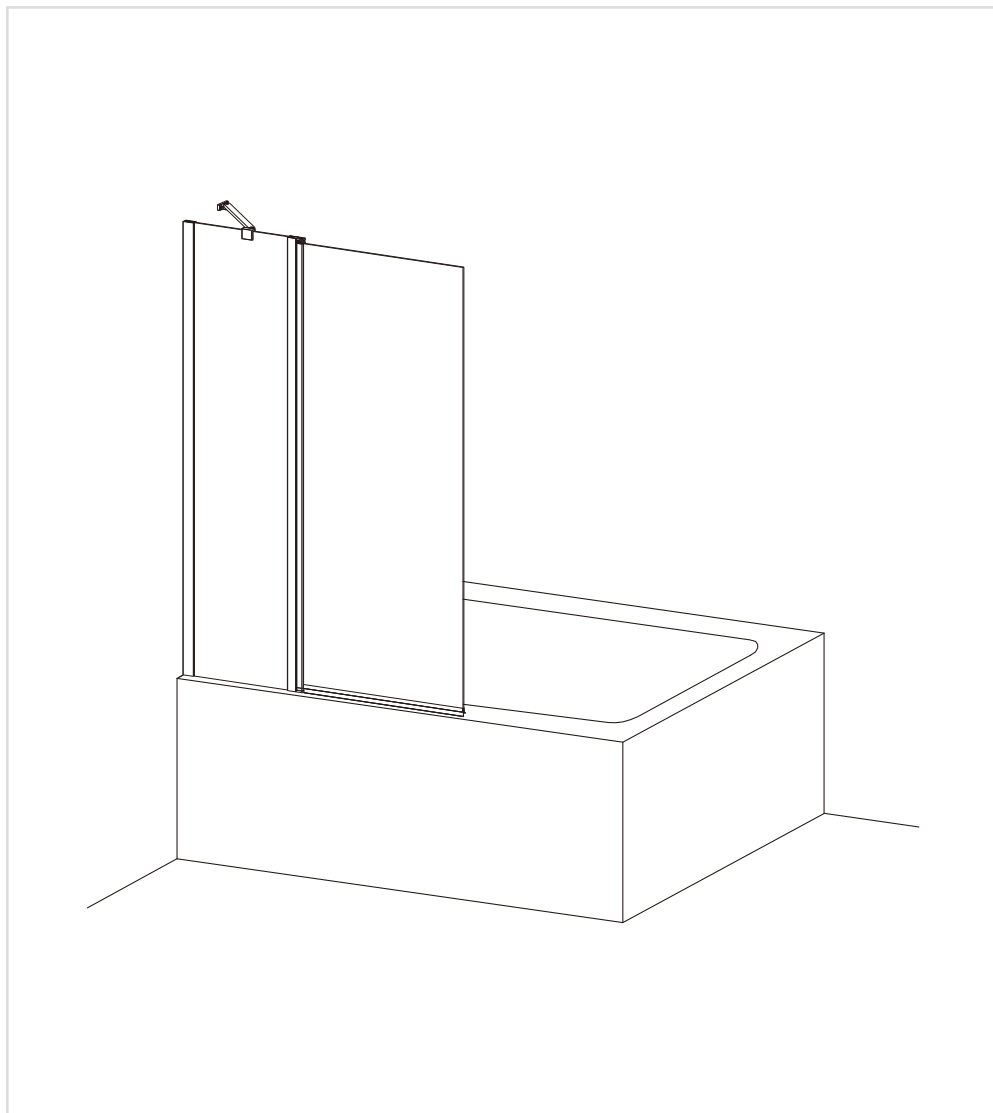

PRODUCT CODES:

CABDSC1150_V2
CABDSB1150
CABDFB1150
CABDVB1150
CABDBZB1150
CABDTB1150
HXBDSC1150
HXBDSB1150
HXBDFB1150

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

4. Care & Maintenance


- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


ORIENTATION




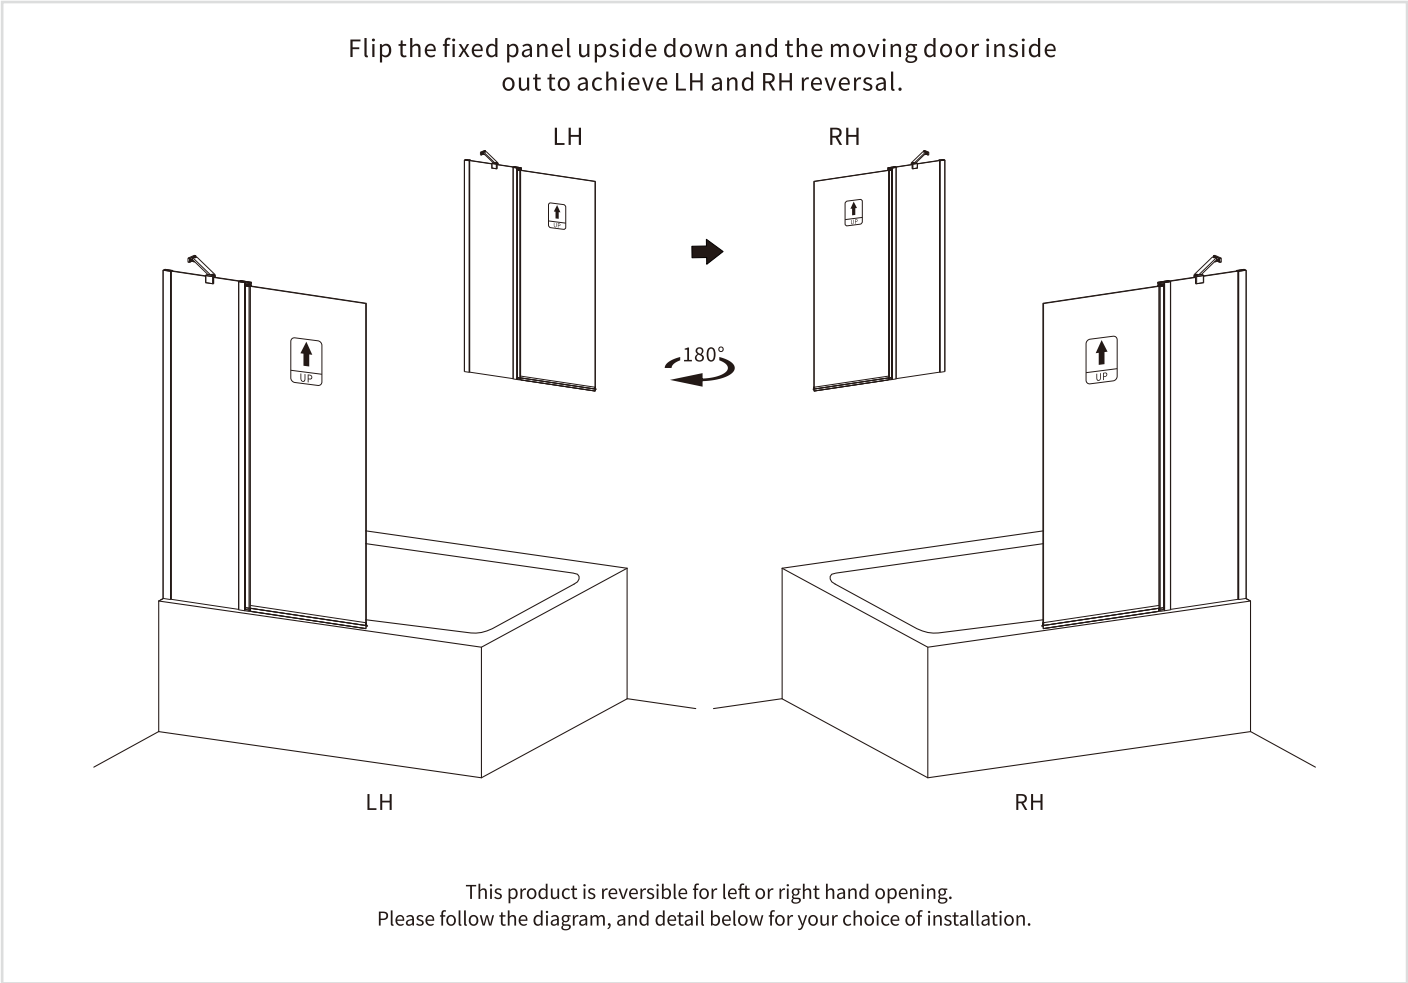


Tools Required (not supplied):



Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			

COMPONENTS


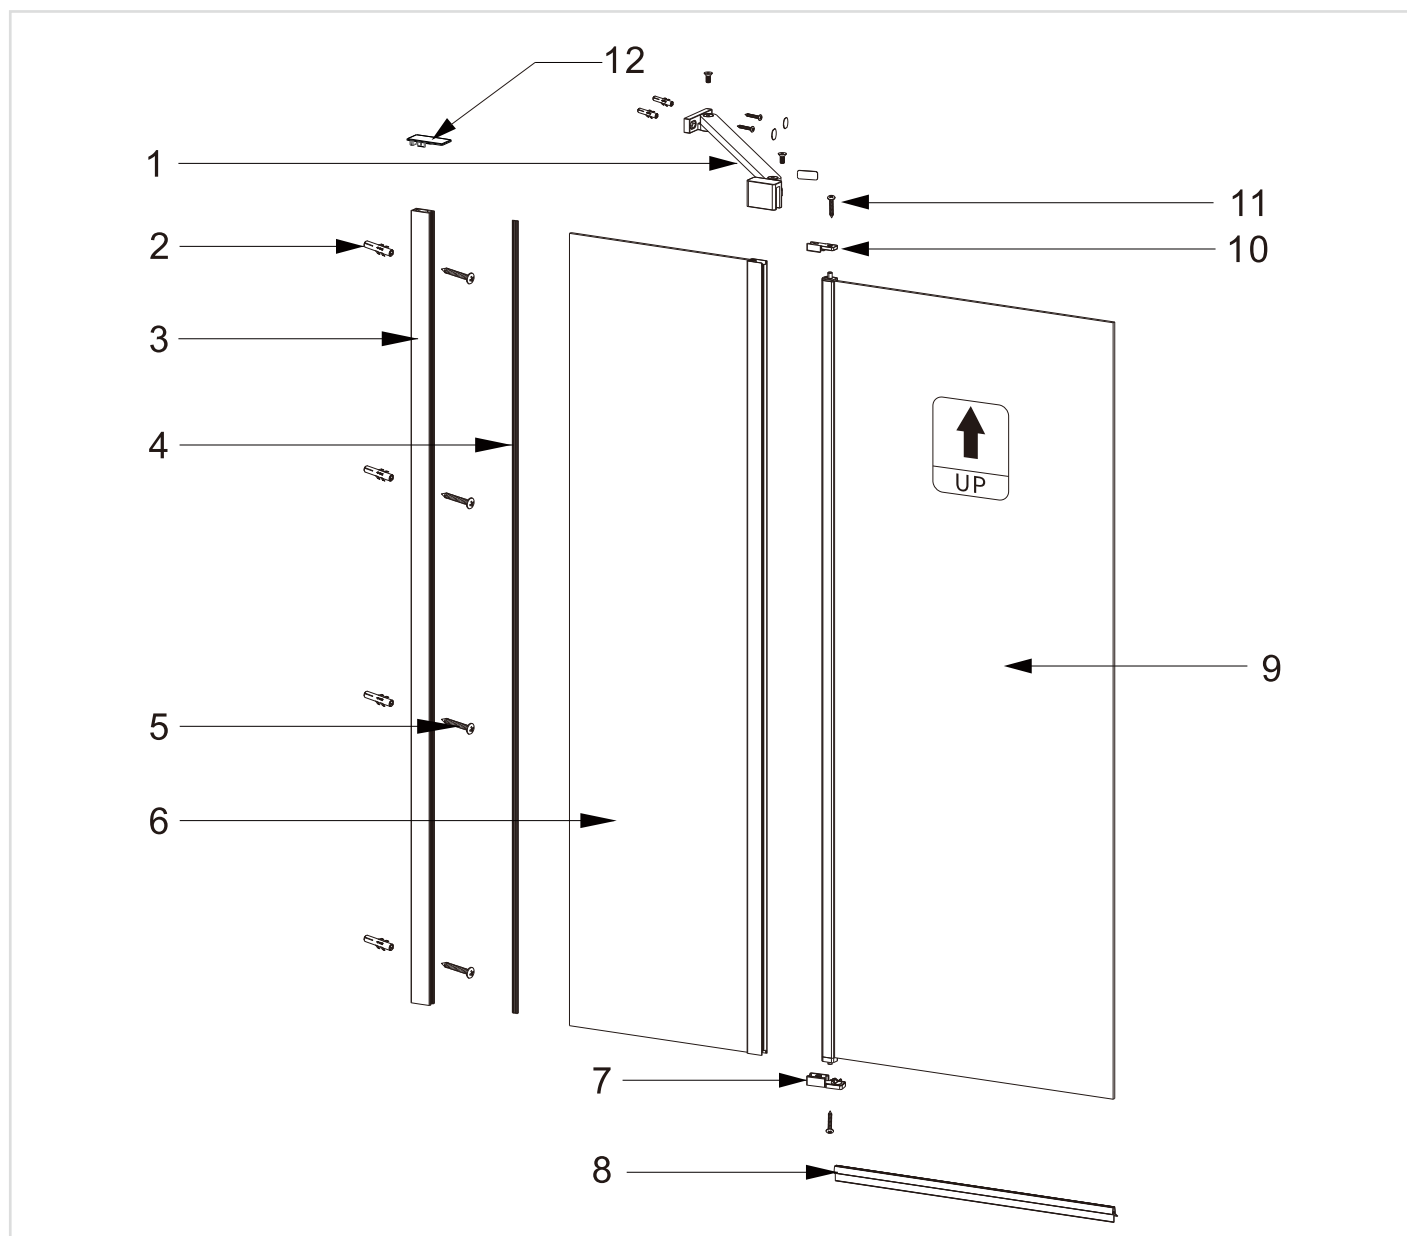


1 Bracing Bar  x1	2 Wall Plug  x4	3 Wall Profile  x1	4 Wedge Seal  x1
5 Screw ST4*50  x4	6 Fixed Panel  x1	7 Bottom pivot seat  x1	8 Bottom seal  x1
9 Moving Panel  x1	10 Top pivot seat  x1	11 Screw ST4*30  x2	12 Wall Profile Cap  x1
13 Allen Key  4mm	14 Wedge Gasket Tool  x1		

INSTALLATION

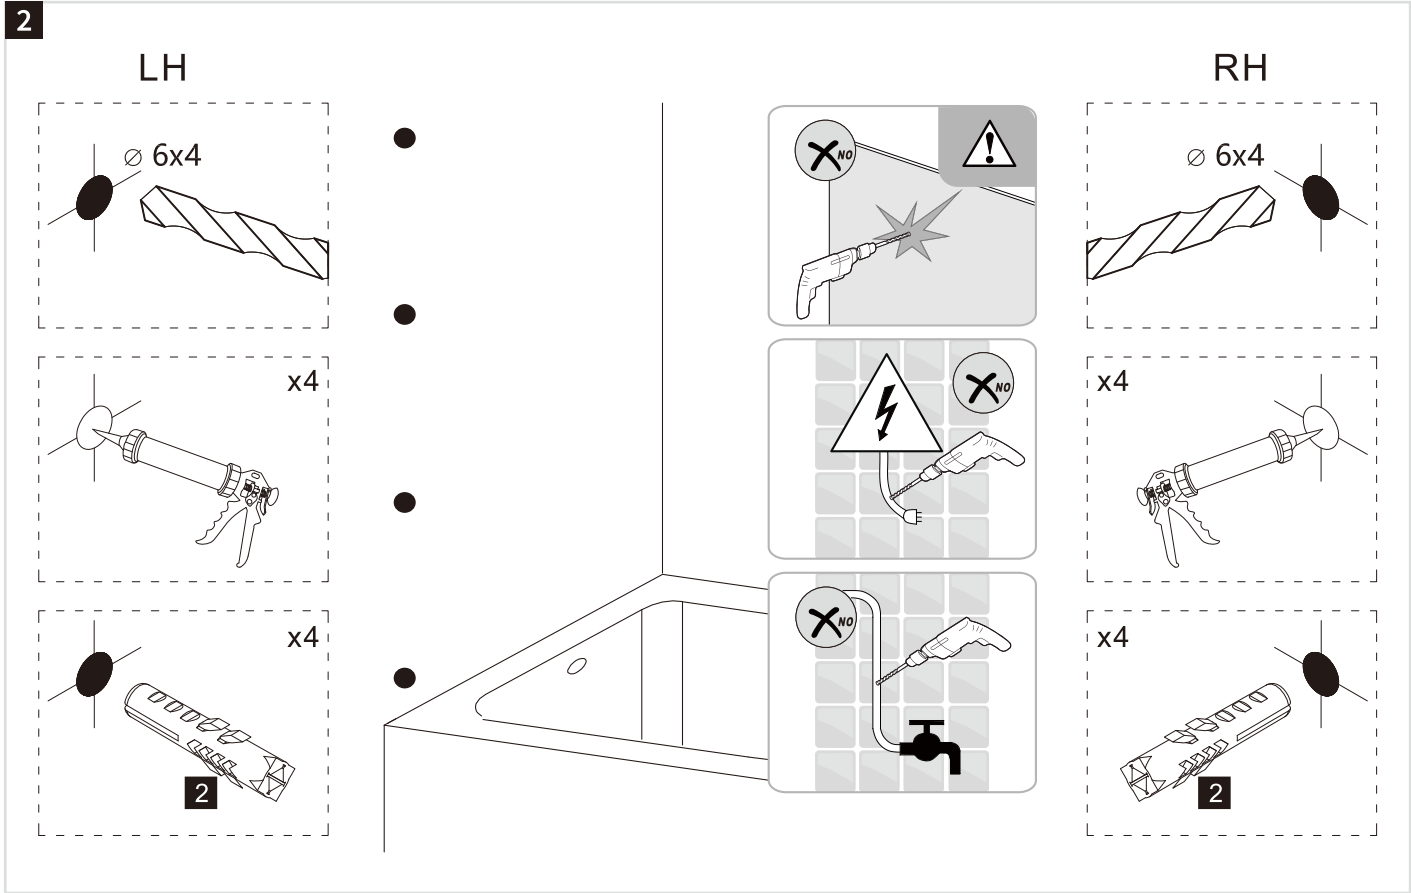
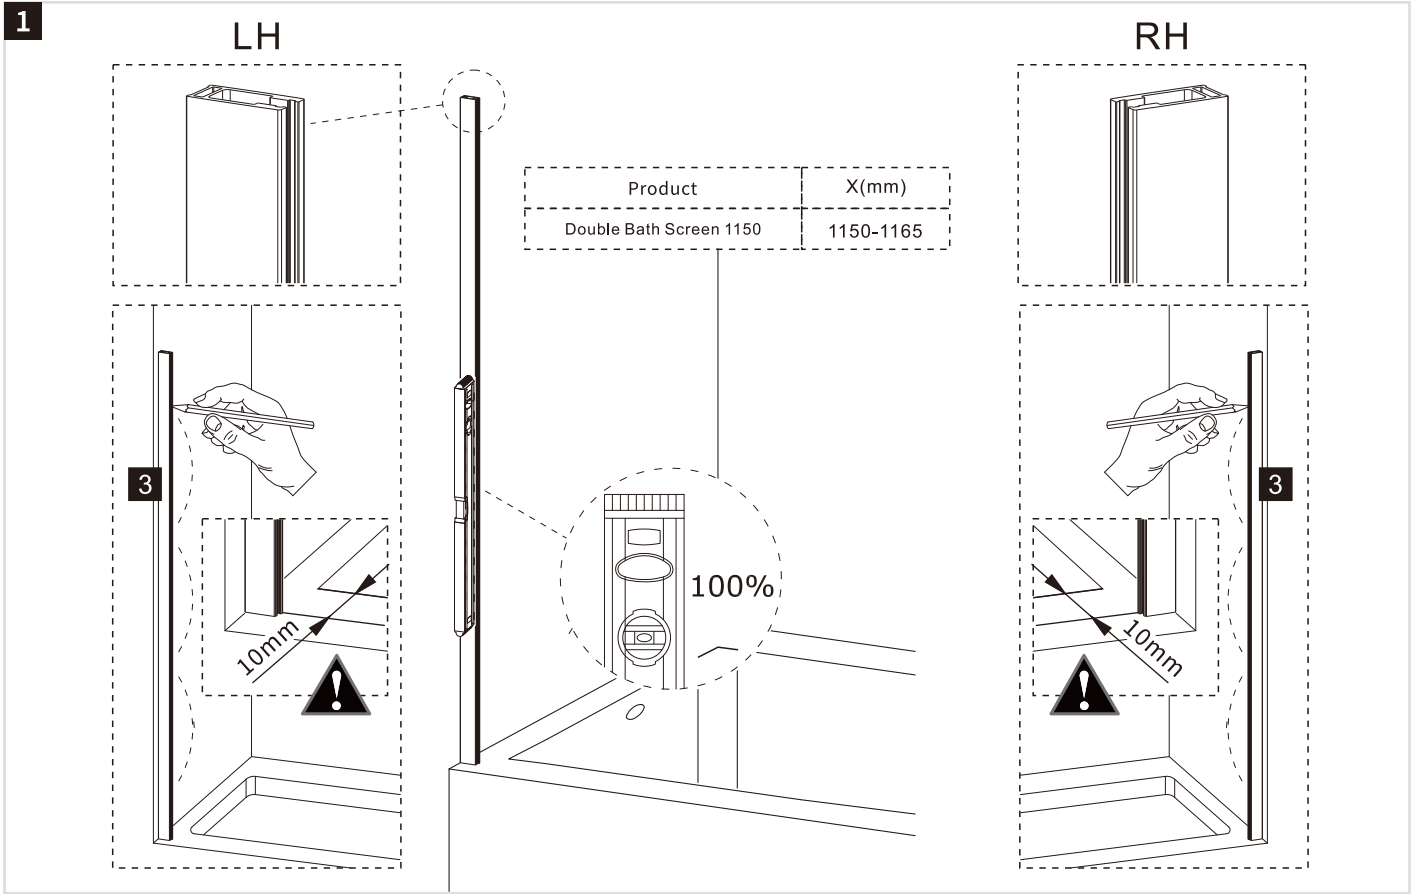


INSTALLATION



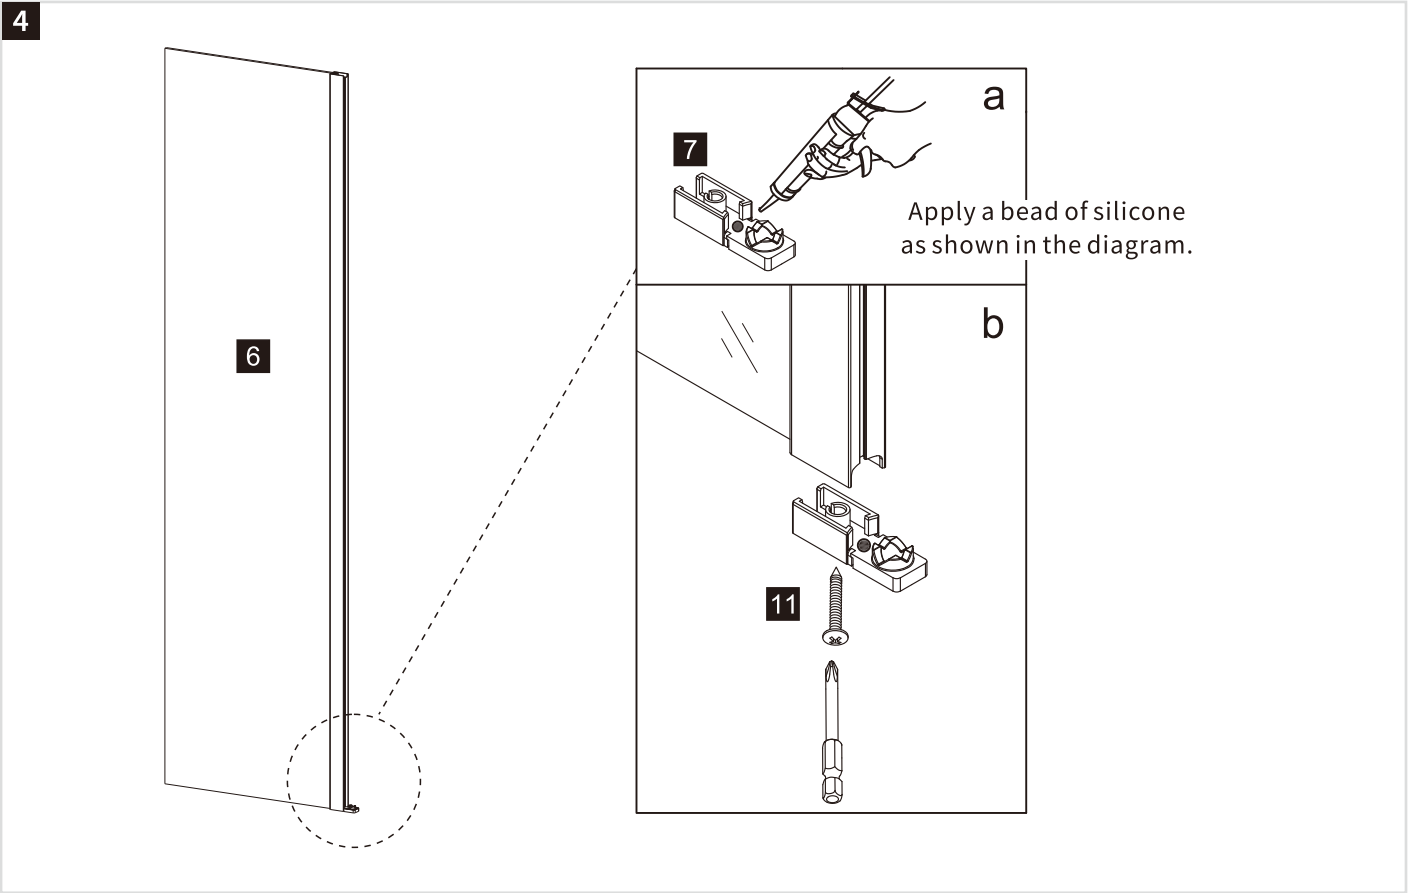
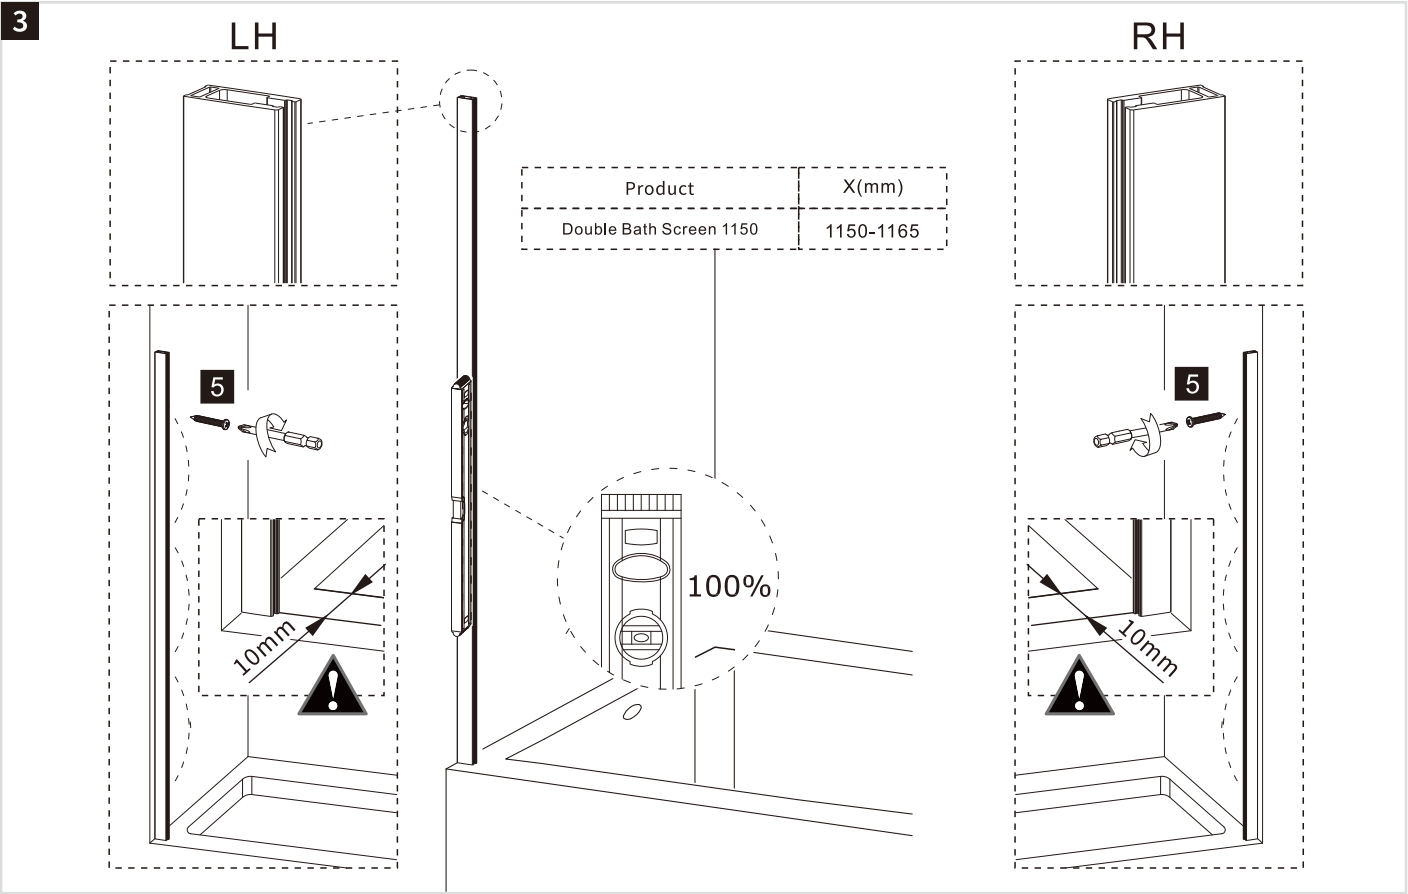


INSTALLATION

5

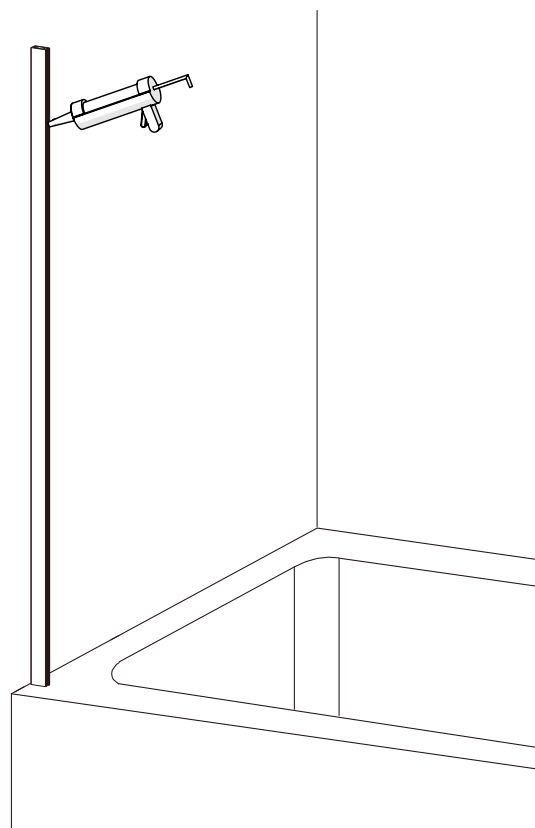
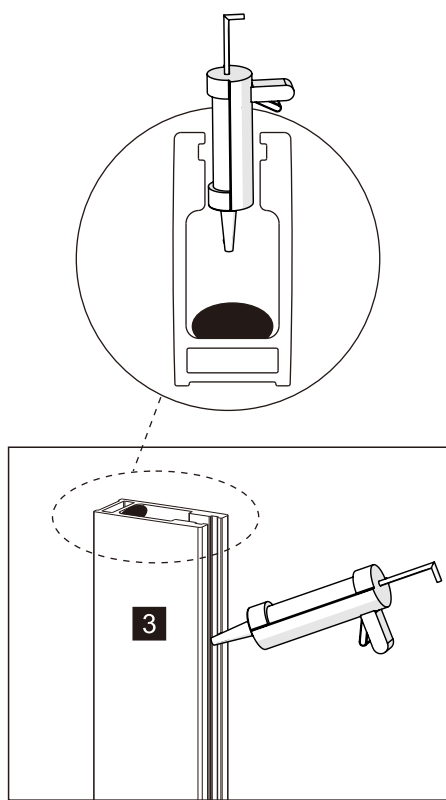


6

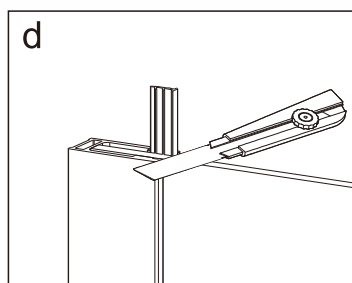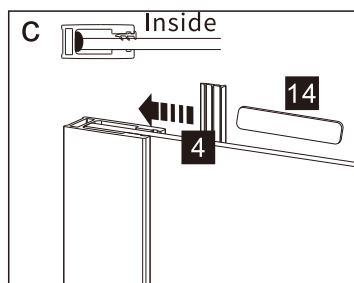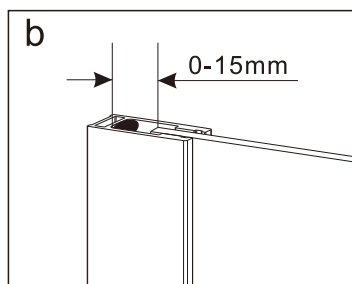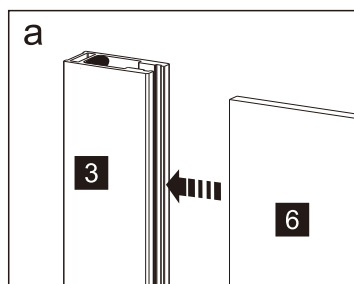


INSTALLATION

7

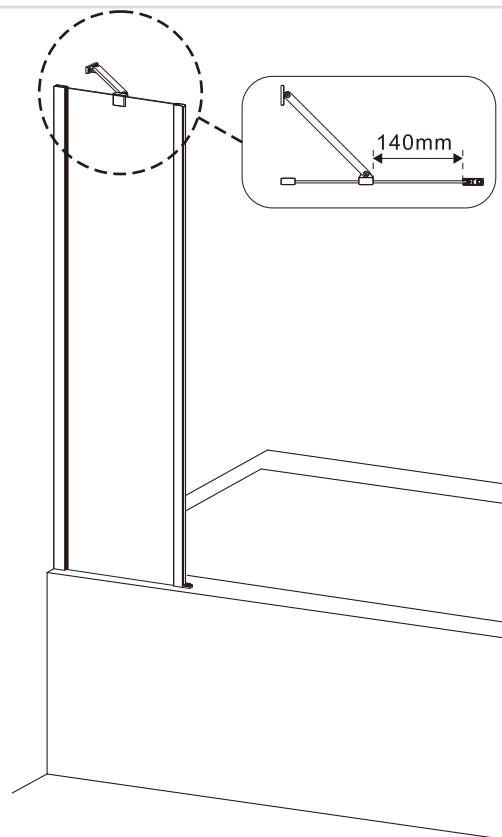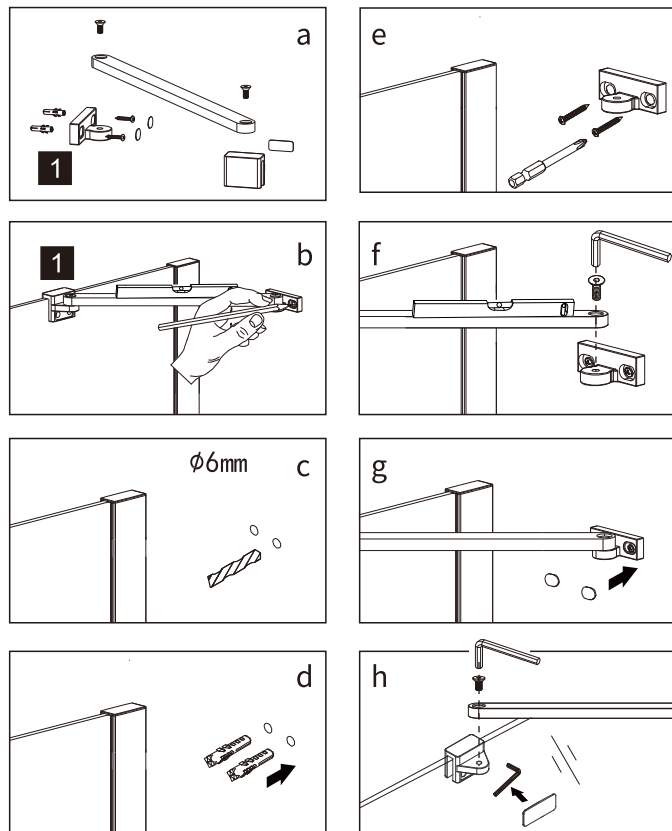


8

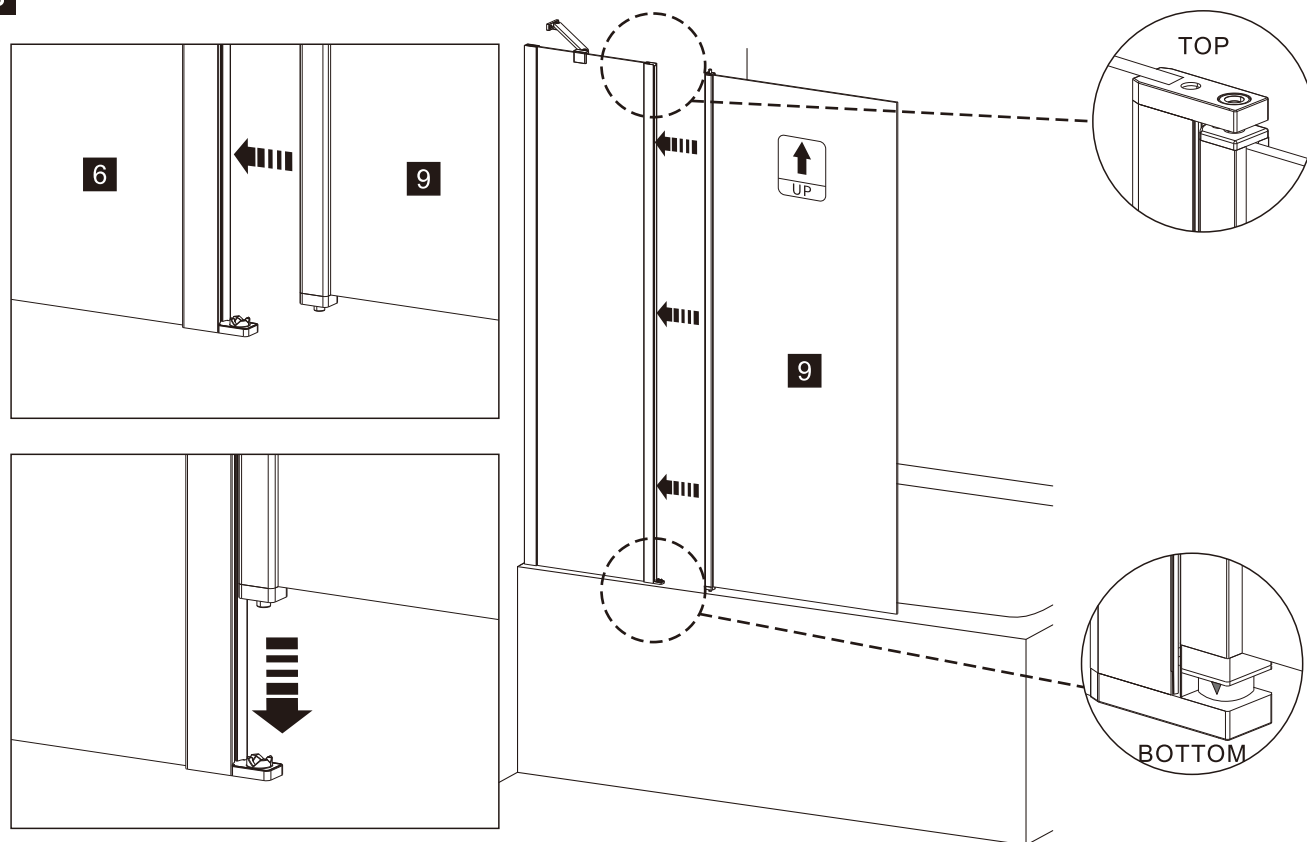

INSTALLATION

9

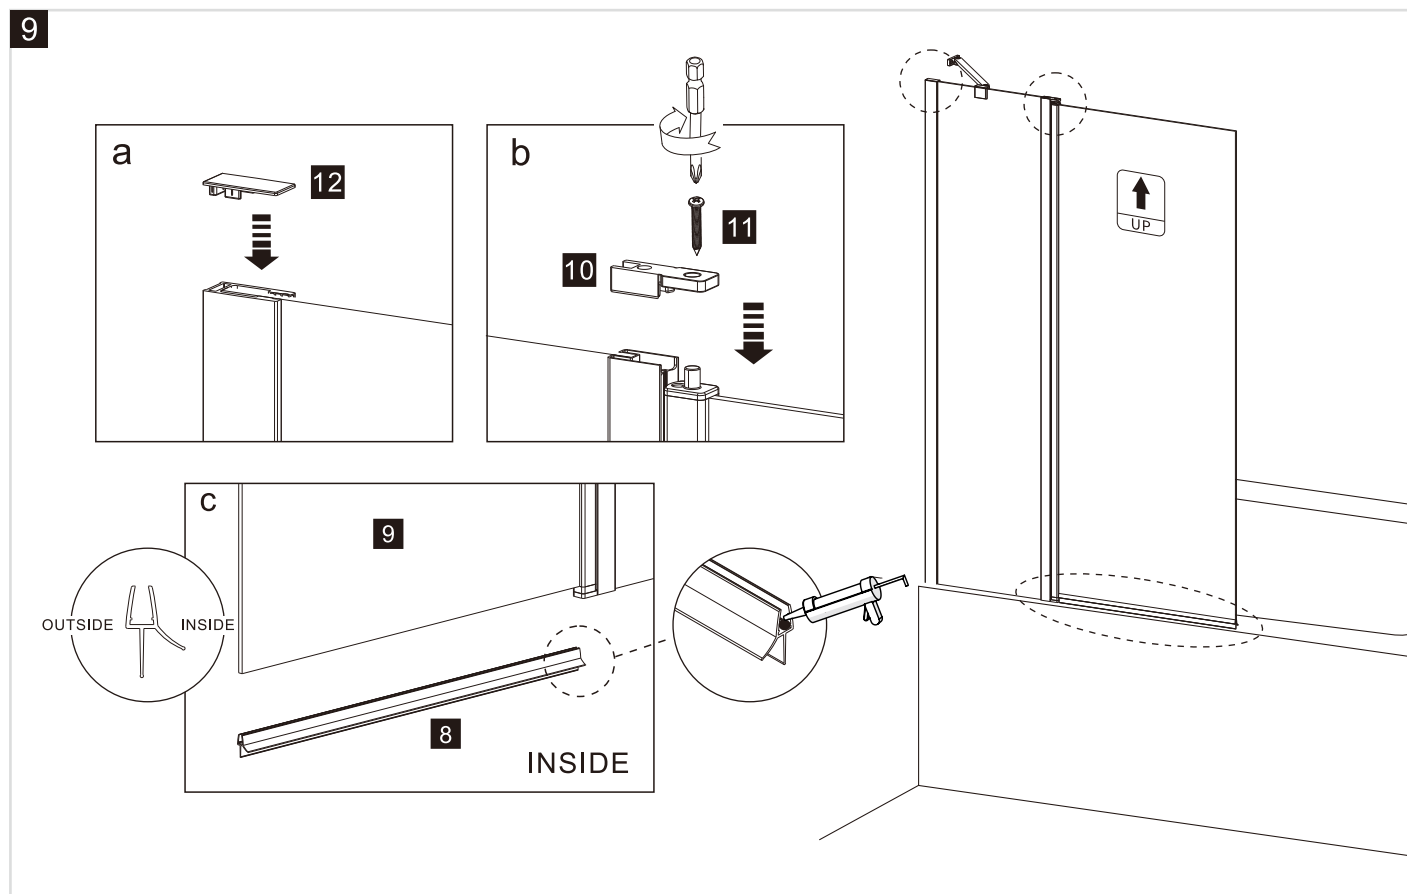

10

